LIBRARY OF CONGRESS.

TF420

Chap. _____ Copyright No. _____

Shelf .K6

1900

UNITED STATES OF AMERICA.

AIR BRAKE.

SUPPLEMENT TO

"THE SCIENCE OF RAILWAYS"

BY

MARSHALL MONROE KIRKMAN.

PUBLISHED BY THE

WORLD RAILWAY PUBLISHING COMPANY,

ILLUSTRATING
AND EXPLAINING THE WORKINGS OF THE
AIR BRAKE.

PRICE $2.50.

NEW YORK AND CHICAGO:
THE WORLD RAILWAY PUBLISHING COMPANY,
1900.

Library of Congress
TWO COPIES RECEIVED
FEB 7 1901
Copyright entry
Jan. 17, 1901
No. XXc. 1133a
SECOND COPY

TK423
.K588

TF4-0
.K6
1900

COPYRIGHT BY
THE WORLD RAILWAY PUBLISHING COMPANY,
1900.
All rights reserved.

THE AIR BRAKE.

THE AIR BRAKE AND ITS WORKINGS.

The vast and unexampled use of the Air Brake makes a clear knowledge of it of vital importance to every one actively interested in the movement of trains. In order to bring this about more fully, I have prepared, as a supplement to "THE SCIENCE OF RAILWAYS" the accompanying plates and descriptive matter, illustrating and explaining the WESTINGHOUSE QUICK ACTION AUTOMATIC BRAKE APPARATUS.

It embraces the latest improved appliances and such as the Westinghouse Company includes under that head.

The diagrams, therefore, will be found especially interesting and valuable to all who have occasion to use or make a study of such matters.

Nothing could be more clear than the cuts and the explanations that accompany them, as they have in the main been prepared under the immediate eye of the Westinghouse Company.

The rapid increase in the use of the "High-Speed Brake" in fast express service, and the favorable results obtained in handling heavy trains on mountain grades by the employment of the High-Pressure Control Apparatus (Plate G 49) lend especial interest to the accompanying illustrations of these devices, to which the attention

of the student in such matters is especially directed.

Attention is also directed to Plate G 1 which illustrates the entire brake, and to the colored Plates, G 2, G 3 and G 35, which show the application of the various parts of the apparatus to the engine, tender and cars. The cuts that follow show, in detail, the various parts which go to make up the complete machine.

In addition to the air brake the TRAIN AIR SIGNAL APPARATUS is also portrayed herein. See Plate F 33.

A carefully prepared index will be found on the following page.

In Volume 1, Chapter 6, of the "Science of Railways," the evolution of the brake is illustrated, followed by a carefully prepared account, with attendant cuts of the air brake and its construction and management. It is again referred to with considerable particularity in Volumes 4 and 12 of the same work. This supplement, I beg to state, is not intended to supersede what is said in the "Science of Railways" in regard to the air brake, but to be auxiliary thereto, for the better elucidation of this very complex and important feature in the operation of trains and in the mechanical department of railroads.

M. M. KIRKMAN.

December, 1900.

INDEX.

	PAGE
Air Pump	8
Air Gauge, Duplex and Semaphore	14
Air Strainers	14, 40, 44, 58
Angle Fittings	14, 44
Angle Cocks	40, 58
Automatic Brake Equipment, Diagramatic Illustration	Opposite 6
Brake-Pipe Air Strainer	40, 58
Car Discharge Valve	Opposite 42
Car Cylinders, Passenger	34, 38, 39
Car Cylinders and Reservoirs, Freight	50 to 56
Cleaning Tool, for Coupling Groove	58
Conductor's Valve	40
Cross Heads	23
Cut-Out Cocks	40, 44, 58, 66
Cylinder Head Types	17
Drain Cock	14, 24
Driver Brake Cylinders	18, 19, 20, 21
Dummy Couplings	40, 44, 58
Duplex Pump Governor	64
Engineer's Brake Valve	10
Engine and Tender Brake Apparatus, Detail Parts	14
Feed Valve	10
Feed Valve Pipe Bracket	66
Flexible Hose Connection for Truck-Brake Cylinder	66
Freight Car Brake Equipment	Opposite 46
Freight Car Brakes, Cylinders and Reservoirs	50 to 56
Freight Car Brake Apparatus, Details	58
High-Speed Brake	Opposite 70
High-Speed Automatic Reducing Valve	60
High Pressure Control	Opposite 68
High-Speed Plain Triple Valve	62
High-Speed and High-Pressure Control, Detail Parts	66
Hose and Fittings	40, 44, 58, 66
Locomotive and Tender Equipment	Opposite 6
Passenger-Car Brake and Train Air Signal Apparatus	Opposite 6
Passenger-Car Fixtures, Details	40
Passenger-Car Brake Cylinders	34, 38, 39
Plain Triple Valves	26, 28, 62
Pressure Retaining Valve	58
Pump Governor	12, 64
Quick-Action Freight Triple Valve	48
Quick-Action Passenger Triple Valve	22, 36
Reducing Valve	Opposite 42
Release Valve	58
Retaining Valve	58
Reversing Cock	66
Reservoirs	24
Reservoir Unions	14
Reservoir Drain Cock	14, 24
Safety Valve	66
Signal Valve	Opposite 42
Signal Whistle	Opposite 42
Signal Pipe Air Strainer	44
Slide-Valve, Feed Valve	10
Steam Valve	14
Tender Drain Cup	14
Tender-Brake Cylinder	30
Train Air Signal Equipment	Opposite 42
Train Air Signal, Detail Parts	44
Triple Valve, Plain	26, 28
Triple Valve, Quick-Action Passenger	32, 36
Triple Valve, Quick-Action Freight	48
Triple Valve, High-Speed	62
Truck-Brake Cylinder	22

PLATE G 1.

Diagramatic Illustration of the Westinghouse Quick-Action Automatic Brake.—*Opposite.*

PLATE G 2.

Westinghouse-American Locomotive and Tender Equipment.—*Opposite.*

PLATE G 3.

Westinghouse Standard Passenger Car Brake and Signal Equipment.—*Opposite.*

SEMAPHOR
GAUGE

SERVICE
DISCHARGE

CUT OUT COCK

PLATE G1. DIAGRAMATIC ILLUSTRATION OF THE WESTINGHOUSE QUICK-ACTION AUTOMATIC BRAKE.

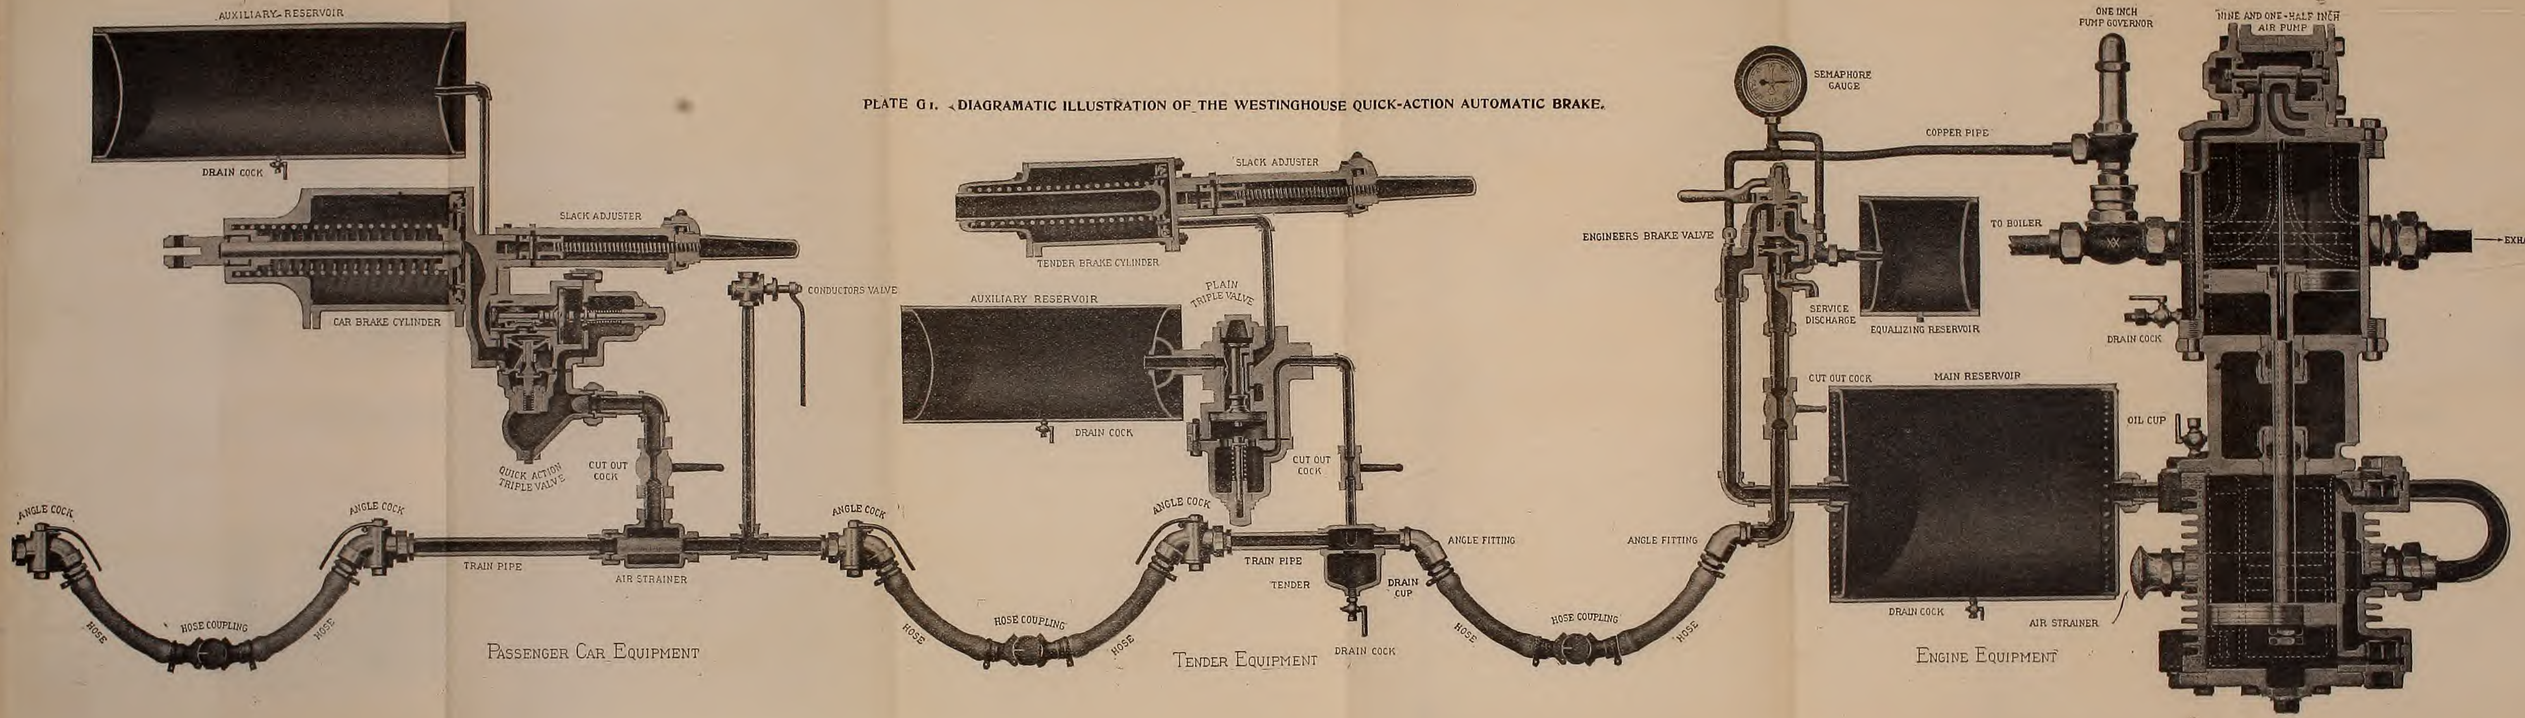

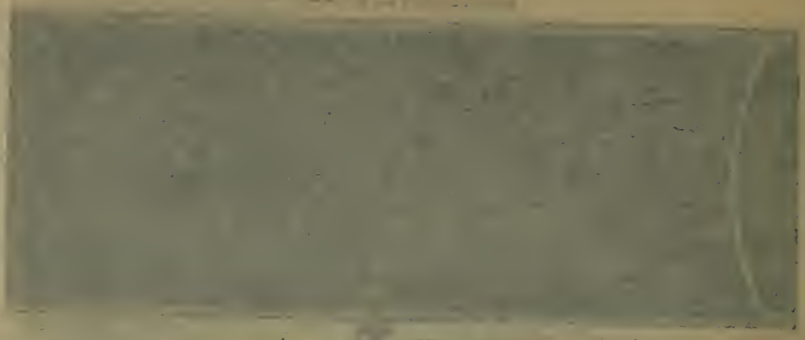

Dia

We

We

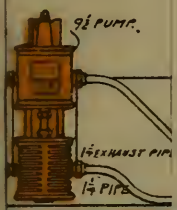

RODS, PINS, AND
E USED WHERE PR
EANS OF HEAVY CL
H SOAPSUDS. . COPP

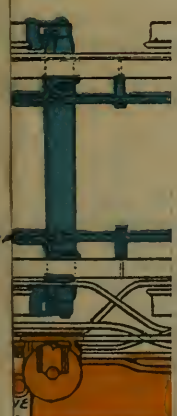

VER BRAKE RESERV

RODS, PINS, AND
E USED WHERE PR
EANS OF HEAVY CL
H SOAPSUDS. COPP

PLATE G2.

WESTINGHOUSE-AMERICAN LOCOMOTIVE AND TENDER EQUIPMENT.

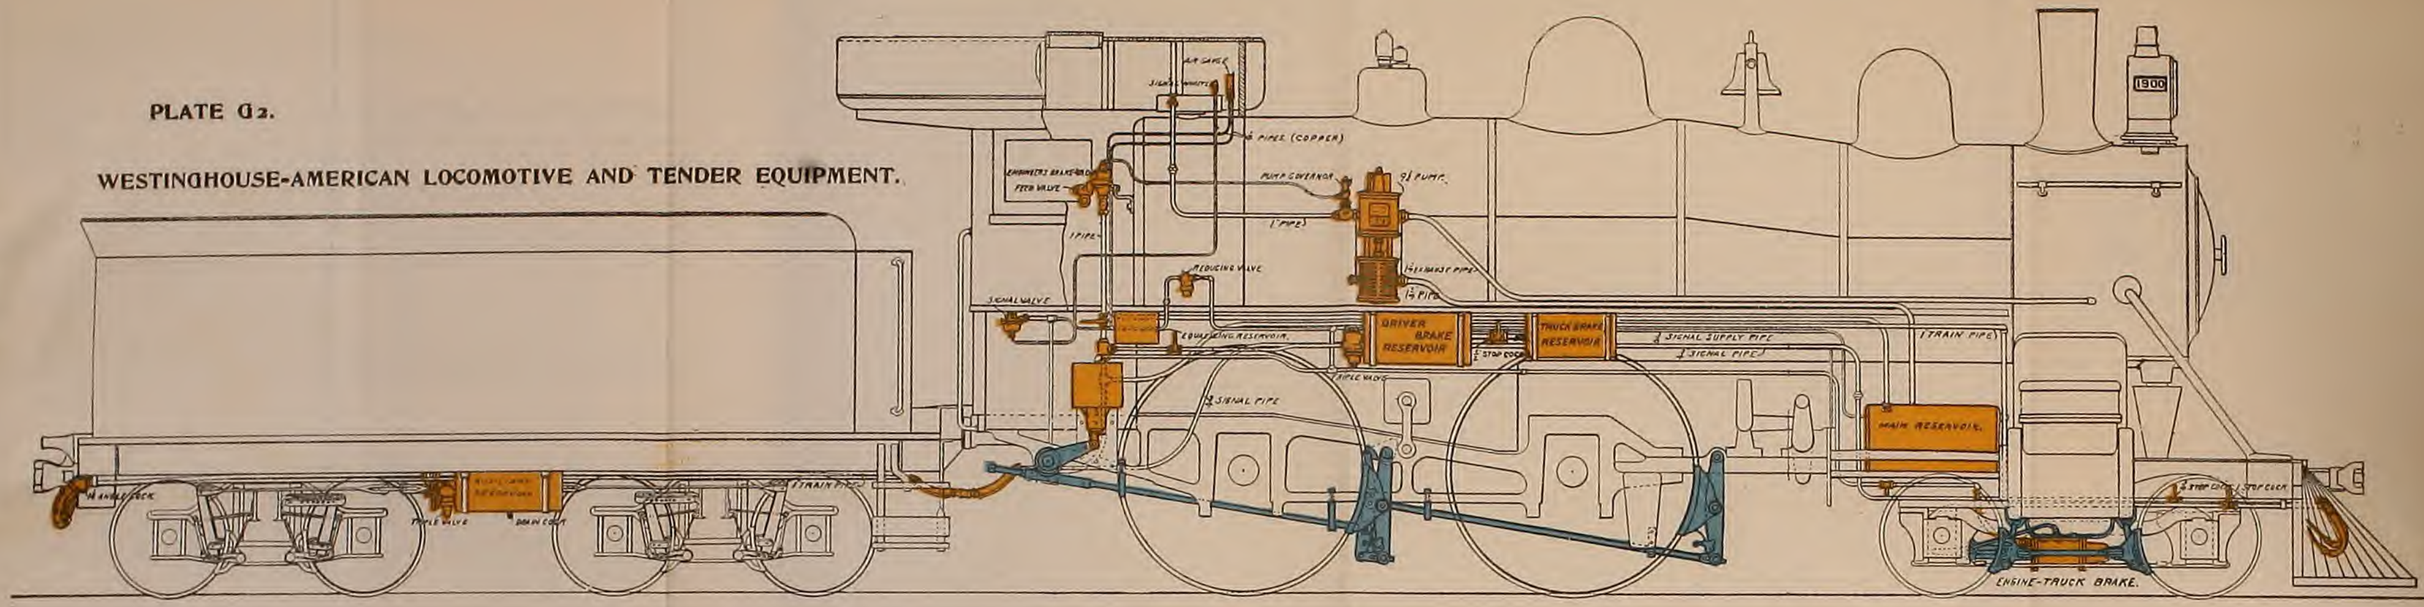

EXPLANATION OF TINTS.

Westinghouse Automatic Brake and Train Air-Signal Apparatus shown in Orange Tint.
American Driver Brake, Engine-Truck Brake and Automatic Slack Adjuster shown in Blue Tint.

IMPORTANT SUGGESTIONS.

All brake rods, pins, and levers illustrated are M. C. B. standard sizes, and no deviation therefrom should be permitted. In piping, ells should not be used where practicable to employ bends instead. Remove fins carefully, blow out pipes with steam, and attach firmly to car timbers by means of heavy clamps. Use no lead inside of sockets; if needed, apply sparingly on outside, and test all connections under pressure with soapsuds. Copper pipes are recommended for Air-Gauge and Pump-Governor connections.

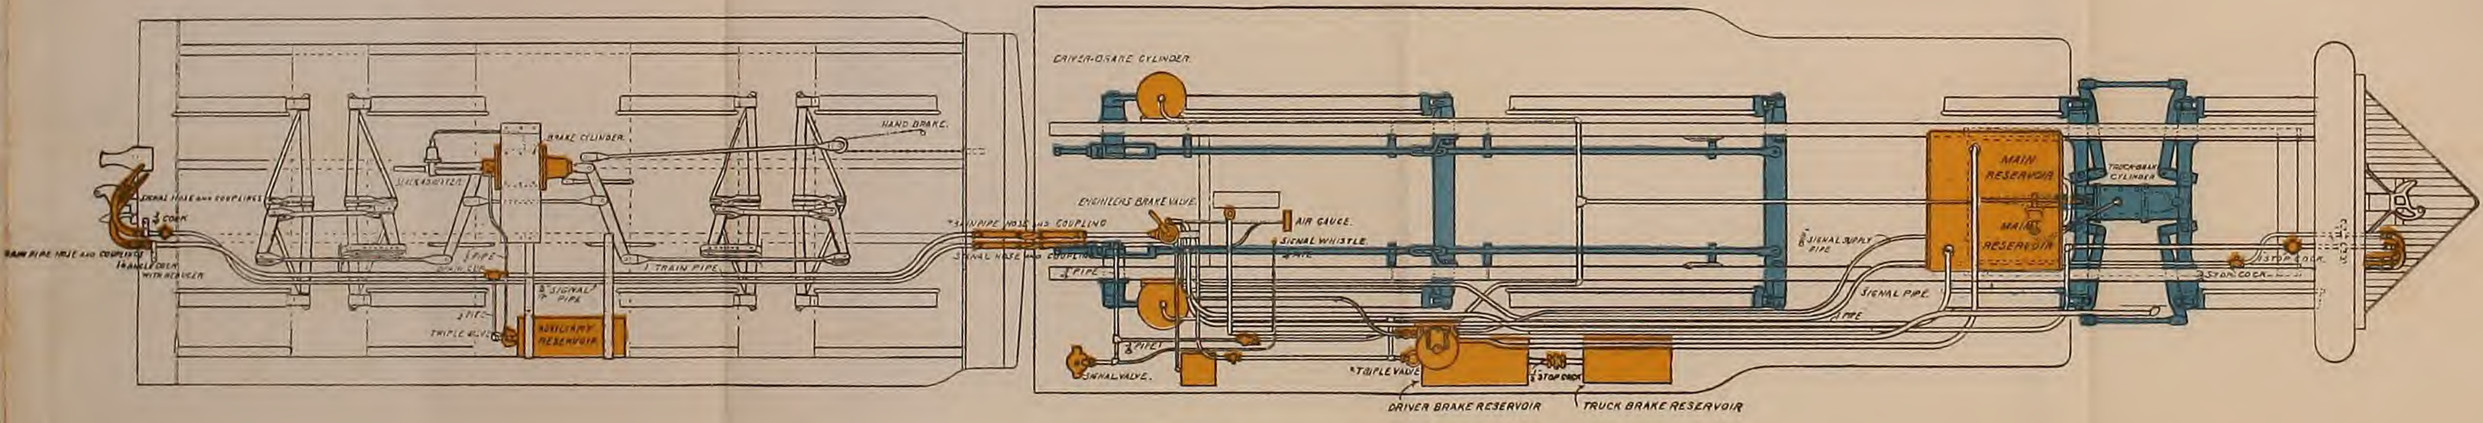

Dia

We

We

CAR BRAKE A

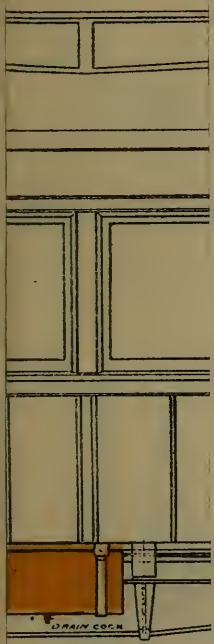

ALL BRAKE RODS, PINS,
OULD NOT BE USED WHE
BERS BY MEANS OF HEA
ESSURE WITH SOAPSUDS

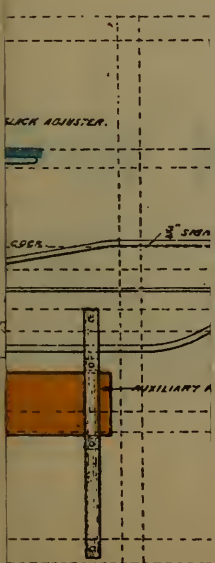

PLATE G3. WESTINGHOUSE STANDARD PASSENGER CAR BRAKE AND SIGNAL EQUIPMENT.

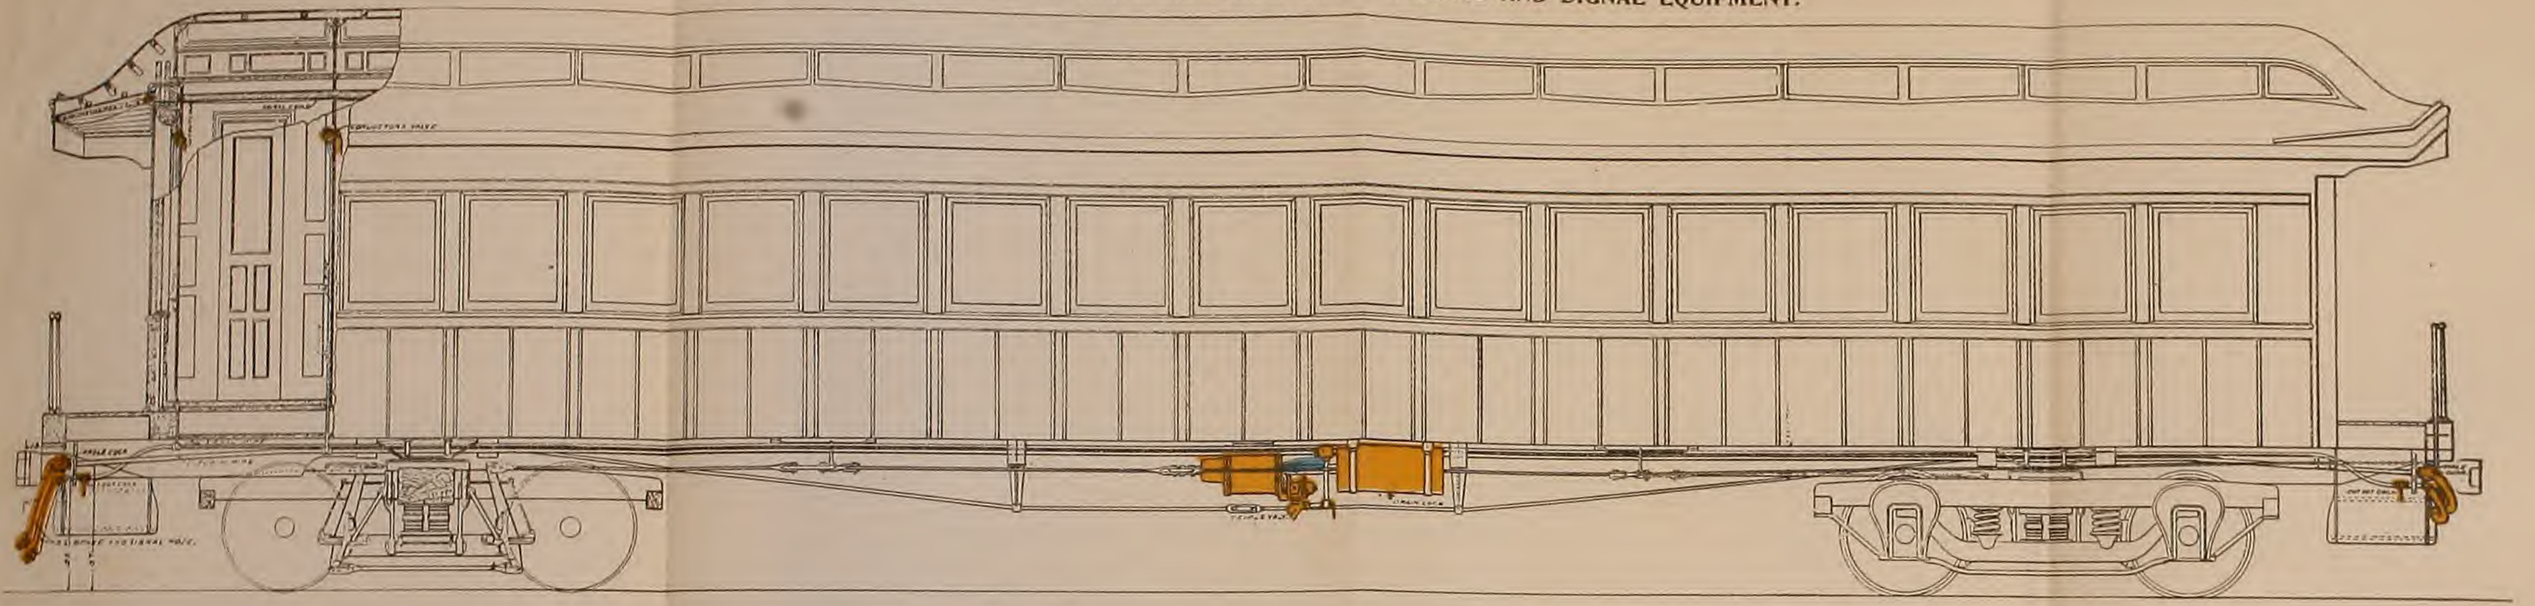

EXPLANATION OF TINTS

STANDARD QUICK-ACTION AUTOMATIC BRAKE AND TRAIN AIR-SIGNAL APPARATUS FURNISHED WITH COMPLETE PASSENGER CAR EQUIPMENTS—SCHEDULES C-1, R P AND K—SHOWN IN ORANGE TINT

AMERICAN BRAKE COMPANY'S AUTOMATIC SLACK ADJUSTER SHOWN IN BLUE TINT

IMPORTANT SUGGESTIONS.

ALL BRAKE RODS, PINS, AND LEVERS ILLUSTRATED ARE M. C. B. STANDARD SIZES, AND NO DEVIATION THEREFROM SHOULD BE PERMITTED. IN PIPING, ELLS SHOULD NOT BE USED WHERE PRACTICABLE TO EMPLOY BENDS INSTEAD. REMOVE FINS CAREFULLY, BLOW OUT PIPES WITH STEAM, AND ATTACH FIRMLY TO CAR TIMBERS BY MEANS OF HEAVY CLAMPS. USE NO LEAD INSIDE OF SOCKETS, IF NEEDED APPLY SPARINGLY ON OUTSIDE, AND TEST ALL CONNECTIONS UNDER PRESSURE WITH SOAPSUDS.

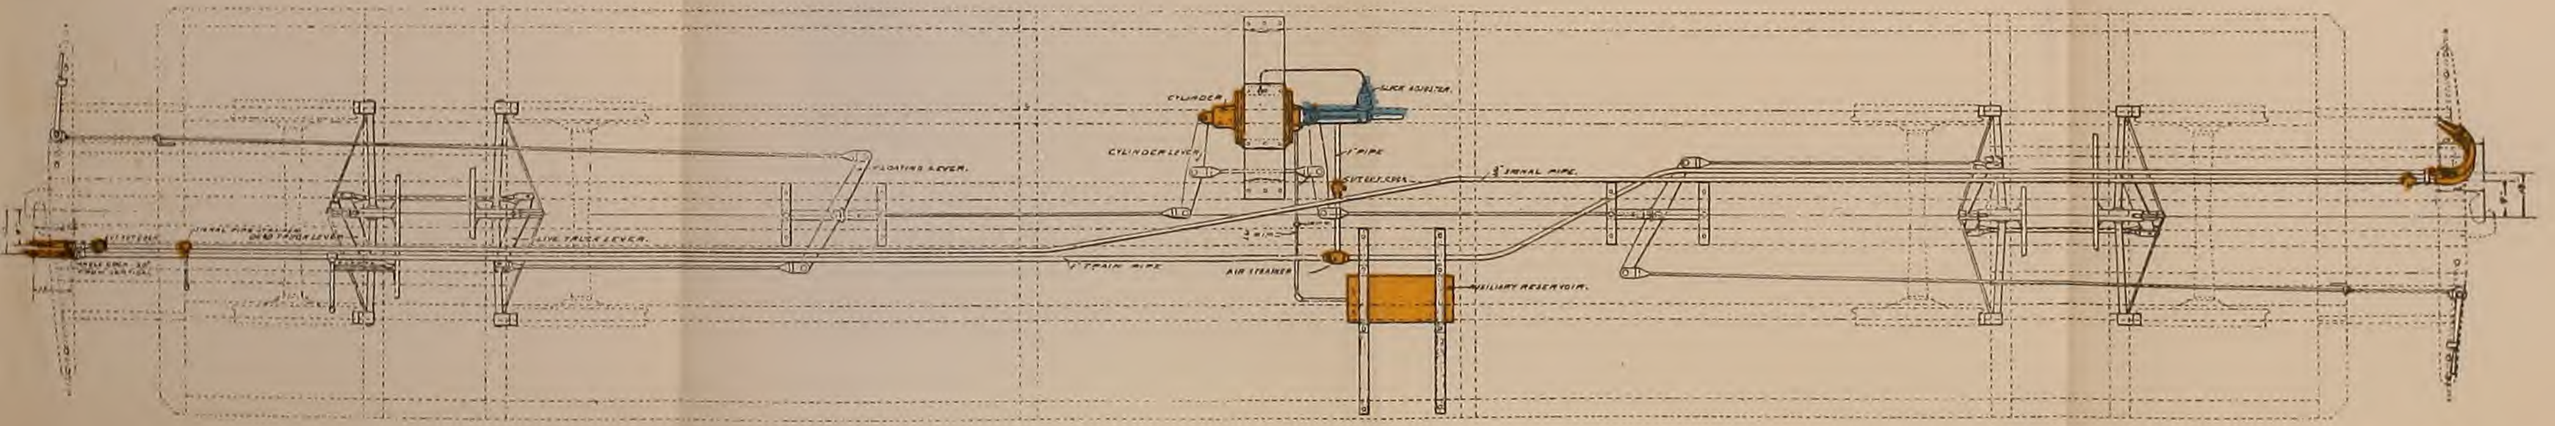

Di

W

W

PLATE F4. NINE AND ONE-HALF INCH AIR PUMP.

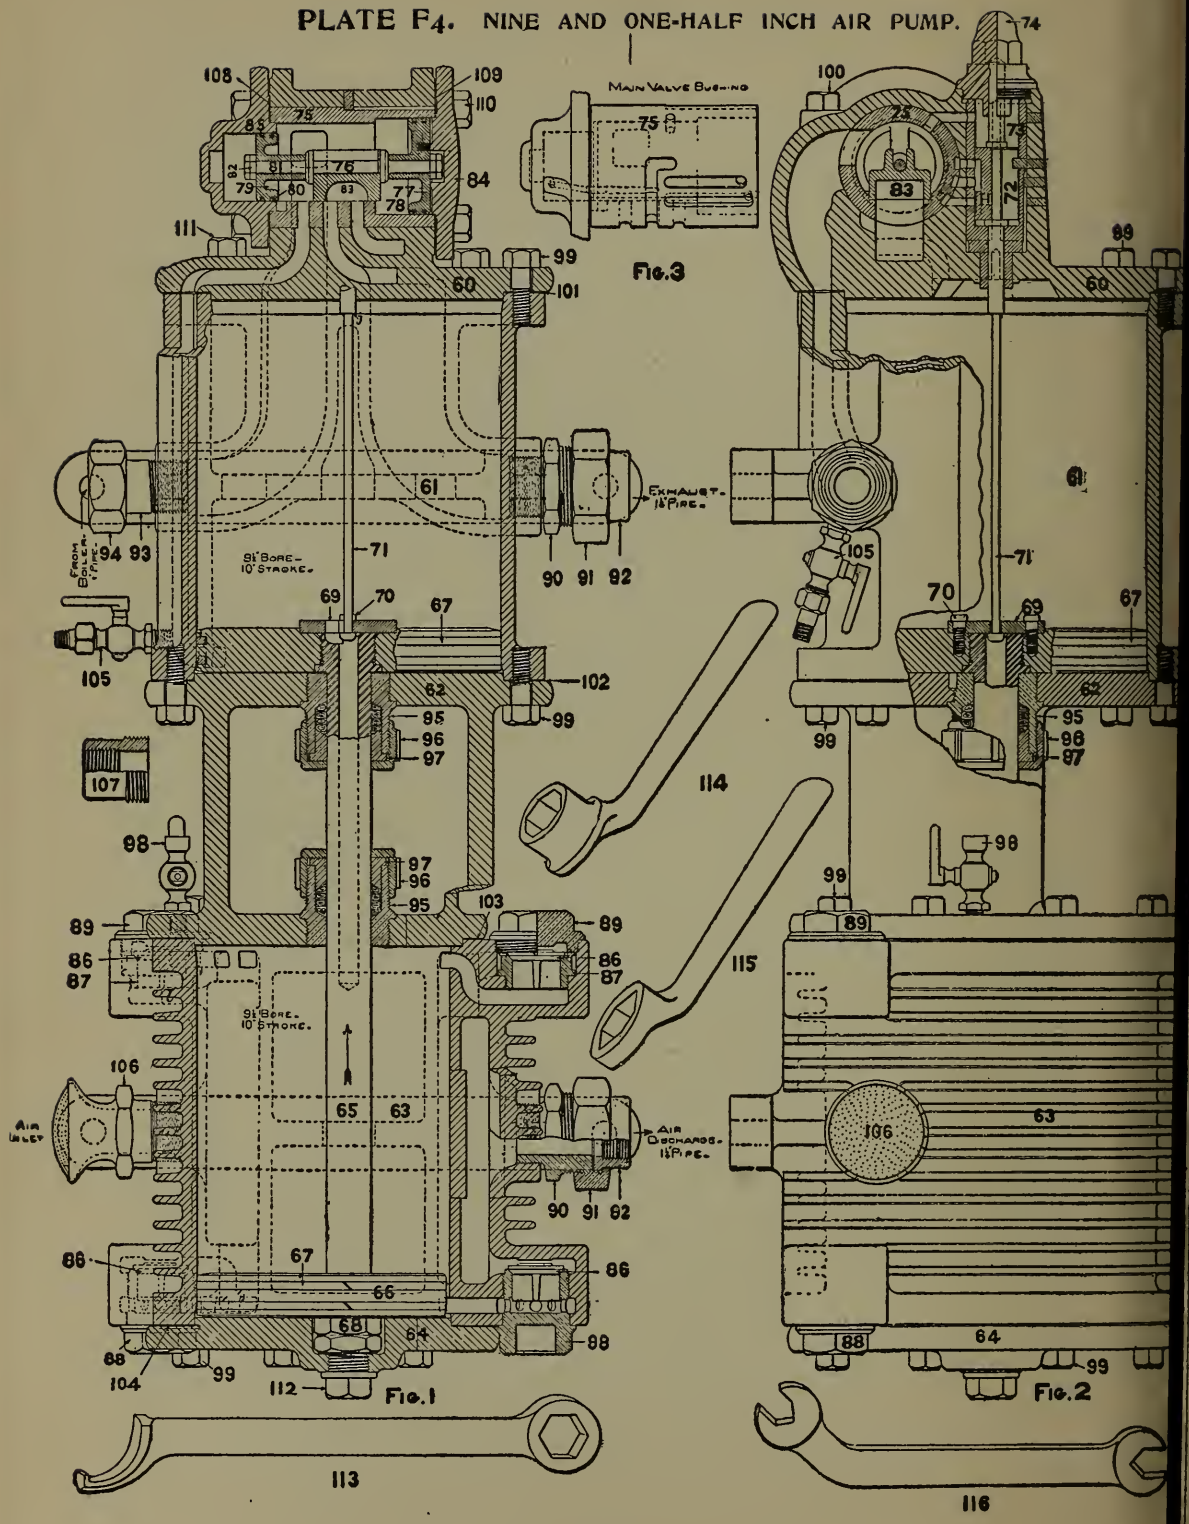

PLATE F4.

NINE AND ONE-HALF INCH AIR PUMP.

No. 1. Nine and One-half inch Air Pump, complete.—

No.
60. Top Head, complete (includes one each of Nos. 72, 73, 74, 75, 76, 83, 84, 85, 108, and 109, and 8 of No. 110)
61. Steam Cylinder, complete (includes one each of Nos. 90, 91, 92, 93 and 94, and 2 of No. 105).
62. Center Piece, complete (includes 2 each of Nos. 95, 96, and 97, and one of No. 98).
63. Air Cylinder, complete (includes 4 of No. 86, 2 each of Nos. 87, 88, and 89, and one each of Nos 90, 91, 92, and 106).
64. Lower Head.
65. Steam Piston and Rod (includes 2 each of Nos. 67, 68, and 70, and one of No. 69).
66. Air Piston, complete (includes 2 of No. 67).
67. Piston Packing Ring
68. Piston-Rod Nut
69. Reversing-Valve Plate
70. Reversing-Valve-Plate Bolt
71. Reversing-Valve Rod.
72. Reversing Valve.
73. Reversing-Valve-Chamber Bush.
74. Reversing-Valve-Chamber Cap.
75. Main-Valve Bush.
76. Main Valve, complete (includes Nos. 77, 79, and 81, and 4 of No 82).
77. Large Main-Valve Piston (includes 2 of No. 78).
78. Large Main-Valve-Piston Packing Ring
79. Small Main-Valve Piston (includes 2 of No. 80).
80. Small Main-Valve-Piston Packing Ring.
81. Main-Valve Stem.

No.
82. Main-Valve-Stem Nut.
83. Main Slide Valve.
84. Right Main-Valve Cylinder Head.
85. Left Main-Valve Cylinder Head.
86. Air Valve.
87. Air-Valve Seat.
88. Air-Valve Cage.
89. Valve-Chamber Cap.
90. One and One-fourth inch Union Stud.
91 One and One-fourth inch Union Nut.
92. One and One-fourth inch Union Swivel.
93 One-inch Steam-Pipe Stud.
94. Governor Union Nut.
95. Stuffing Box.
96. Stuffing-Box Nut
97. Stuffing-Box Gland.
98. Air-Cylinder Oil Cup.
99 Short Cap Screw ($\frac{5}{8}$"x1$\frac{5}{8}$")
100 Long Cap Screw ($\frac{5}{8}$"x6$\frac{1}{4}$")
101 Upper Steam-Cylinder Gasket
102. Lower Steam-Cylinder Gasket
103 Upper Air-Cylinder Gasket
104 Lower Air-Cylinder Gasket.
105. Drain Cock.
106 Air Strainer
107. One-inch Steam-Pipe Sleeve
108 Left Main-Valve-Head Gasket
109 Right Main-Valve-Head Gasket
110 Main-Valve-Head Bolt ($\frac{5}{8}$"x1$\frac{1}{4}$")
111 Cap Screw ($\frac{5}{8}$"x2").
112 Cylinder-Head Plug.
113. Packing and Cap-Nut Wrench
114. Air-Valve-Seat Wrench.
115 Air-Valve-Cage Wrench
116. Cap-Screw Wrench.

The accompanying cut illustrates the Standard 9 1/2-inch Air Pump, which is usually located on the right side of the locomotive. A special "Left-hand 9 1/2-inch Air Pump" is also manufactured As its name indicates, it is designed for installation on the left side of the locomotive; but all its parts are interchangeable with those of the Standard Pump, and its steam and exhaust-pipe connections have been so arranged that it can be substituted for the same and used on the right side if desired.

PLATE G 6.

ENGINEER'S BRAKE VALVE.

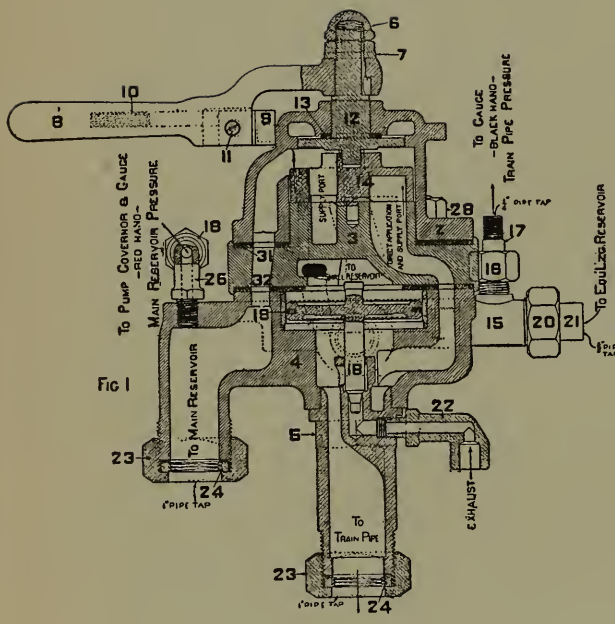

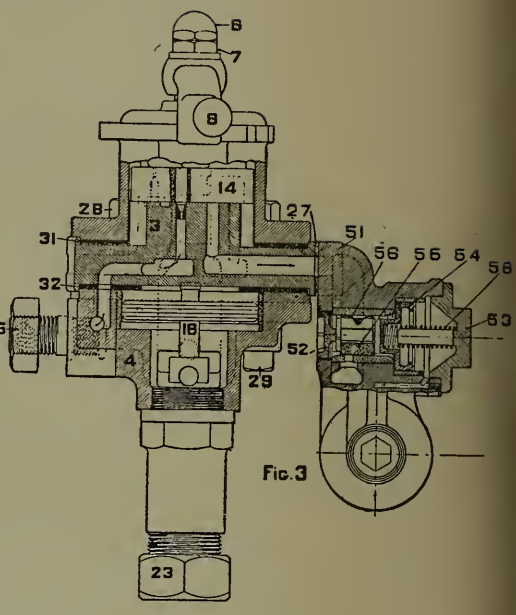

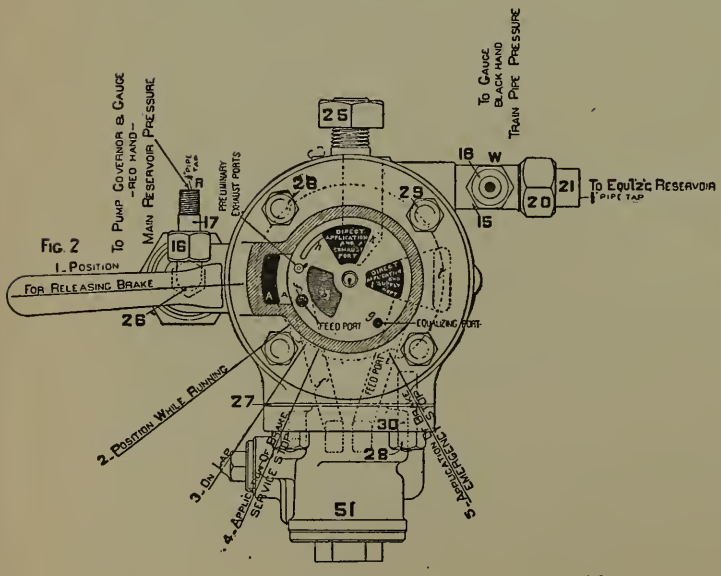

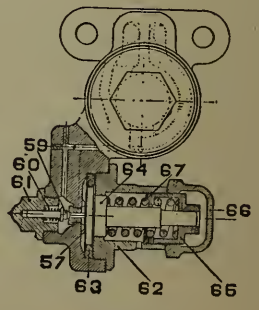

Fig. 4.

PLATE G 6.

ENGINEER'S BRAKE VALVE.

No. 100. Brake Valve with Slide-Valve Feed Valve, One-Inch Cut-out Cock (Fig 6, Plate G 32), and Equalizing Reservoir (Fig. 4, Plate G 23) Complete.

No. 1. Brake Valve proper (without Feed-Valve Attachment); covers Nos. 2 to 32, inclusive.

No.	
2.	Valve Body.
3.	Rotary-Valve Seat.
4.	Bottom Case.
5.	Bottom Cap.
6.	Jam Nut.
7.	Top Nut.
8.	Handle (includes Nos. 9, 10, and 11).
9.	Handle Bolt.
10.	Handle-Bolt Spring.
11.	Handle-Bolt Screw.
12.	Rotary-Valve Key.
13.	Washer.
14.	Rotary Valve.
15.	Gauge-Pipe Tee.
16.	One-fourth inch Union Nut.
17.	One-fourth inch Union Swivel.
18.	Piston Valve (includes No. 19).
19.	Piston Ring.
20.	Three-eighths inch Union Nut.
21.	Three-eighths inch Union Swivel.
22.	Exhaust-Pipe Fitting.
23.	One-inch Union Nut.
24.	One-inch Union Swivel.
25.	Holding Nut.
26.	Gauge-Pipe Fitting.
27.	Feed-Valve-Case Gasket.
28.	Half-inch Nut.
29.	Half-inch Bolt.
30.	Feed-Valve Stud.
31.	Upper Gasket.
32.	Lower Gasket.

No. 50. Slide-Valve Feed Valve, complete; covers Nos. 51 to 67, inclusive.

51.	Feed-Valve Body (bushed).
52.	Flush Nut.
53.	Cap Nut.
54.	Supply-Valve Piston.
55.	Supply Valve.
56.	Supply-Valve Spring.
57.	Diaphragm (2 pieces).
58.	Supply-Valve-Piston Spring.
59.	Regulating Valve.
60.	Regulating-Valve Spring.
61.	Regulating-Valve Cap Nut.
62.	Spring Box.
63.	Diaphragm Ring.
64.	Diaphragm Spindle.
65.	Regulating Nut.
66.	Check Nut.
67.	Regulating Spring.

PLATE F7.

ONE-INCH PUMP GOVERNOR.

STANDARD FOR NINE AND ONE-HALF INCH PUMP.

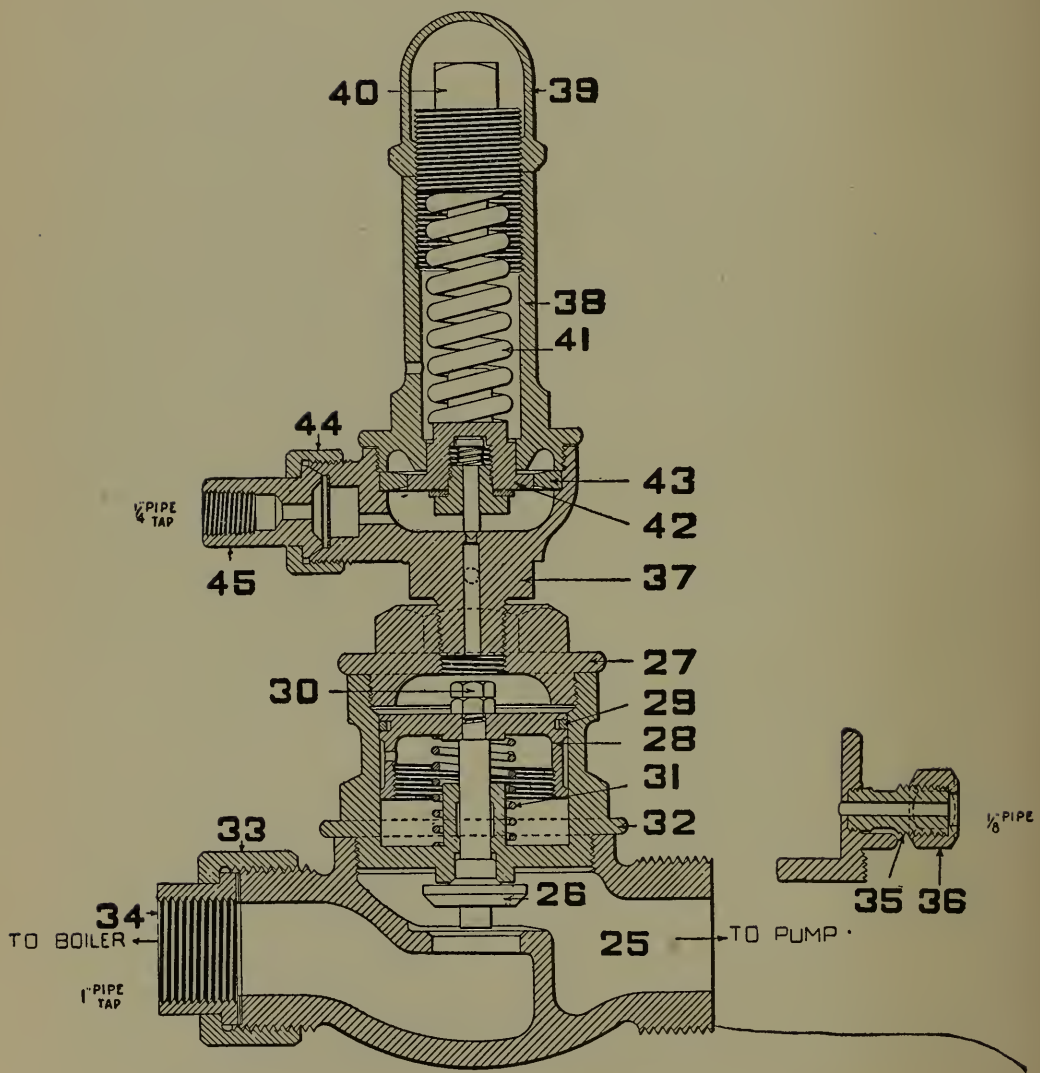

NOTE.—When used in conjunction with an Engineer's Brake Valve having a Feed Valve as in most instances, the Pump Governor should be piped to the Main Reservoir Connection at the Brake Valve, as indicated on Plates "F 6" and "G 6", when an Excess-Pressure Valve is used in place of a Feed Valve, however, the Governor is actuated by Train Line Pressure, and should be piped to Train Line accordingly.

PLATE F7.

ONE-INCH PUMP GOVERNOR.

No. 1. One-inch Pump Governor, complete.

No.		No.	
25.	Steam-Valve Body	35.	Waste-Pipe Stud.
26.	Steam Valve.	36.	Waste-Pipe Union Nut.
27.	Cylinder Cap.	37.	Diaphragm Body.
28.	Governor Piston (includes No. 29).	38.	Spring Box.
29.	Piston Packing Ring.	39.	Cap Nut.
30.	Governor-Piston Nut.	40.	Regulating Nut.
31.	Governor-Piston Spring.	41.	Regulating Spring.
32.	Steam-Valve Cylinder (includes No. 35 and 36).	42.	Diaphragm, complete.
		43.	Diaphragm Ring.
33.	One-inch Union Nut.	44.	Union Nut.
34.	One-inch Union Swivel.	45.	Union Swivel.

PLATE G9. DETAIL PARTS OF ENGINE AND TENDER BRAKE APPARATUS.

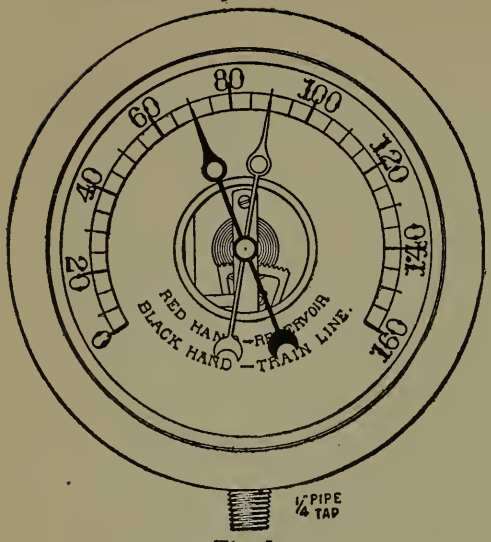

Fig. 1.

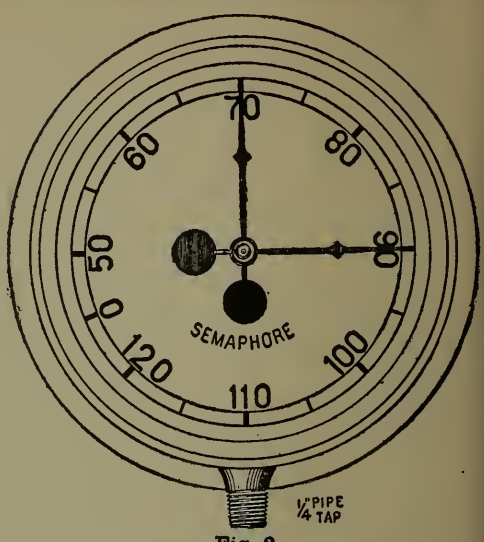

Fig. 2.

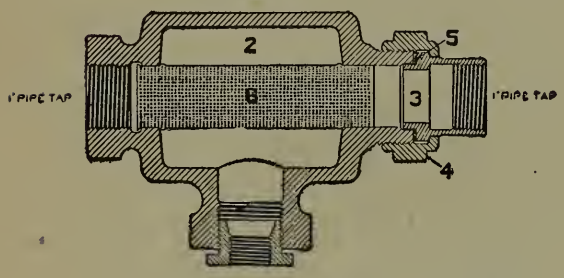

Fig. 3.

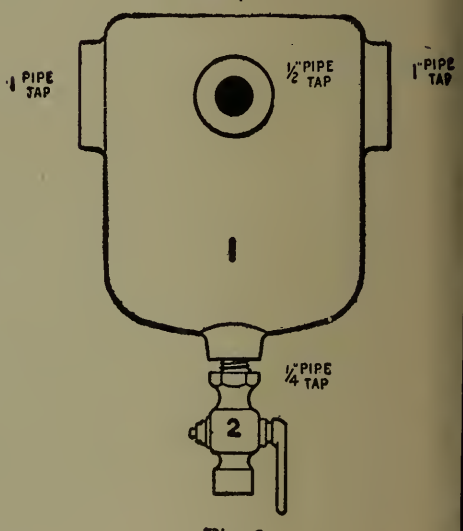

Fig. 6.

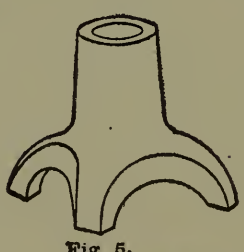

Fig. 5.

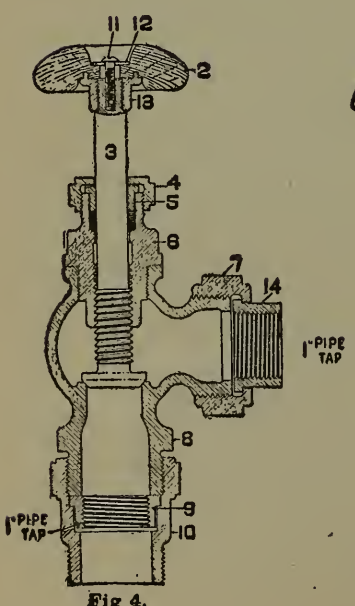

Fig 4.

Fig. 7.

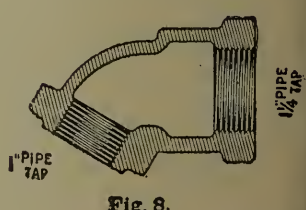

Fig. 8.

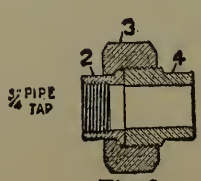

Fig. 9.

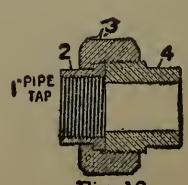

Fig. 10.

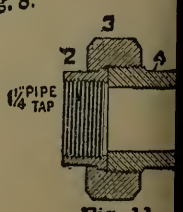

Fig. 11.

PLATE 09.

DETAIL PARTS OF ENGINE AND TENDER BRAKE APPARATUS.

FIG. 1.

Standard Duplex Air Gauge.

FIG. 2.

Semaphore Air Gauge.

FIG. 3.

One-inch by One-half inch Brake-Pipe Air Strainer, complete.

No.	
2.	Strainer Body.
3.	One-inch Union Swivel.
4	Union Nut.
5.	Union Gasket.
6.	Strainer.

FIG. 4.

One-inch Steam Valve, complete.

No.	
2.	Hand Wheel.
3.	Valve Stem.
4.	Packing Nut.
5.	Packing Gland.
6.	Neck Piece.
7.	Union Nut.
8.	Valve Body.
9.	Union Swivel.*
10.	Valve Stud.*
11.	Hand-Wheel Screw
12.	Hand-Wheel Washer
13.	Hand-Wheel Socket.
14.	Steam-Pipe Swivel.

FIG. 5.

Plain Triple-Valve Bracket.

FIG. 6.

Tender Drain Cup, complete.

No.	
1.	Tender Drain Cup.
2.	Tender Drain Cock.

FIG. 7.

Plain Triple-Valve Nipple.

FIG. 8.

One-inch by One and One-fourth inch Angle Fitting.

FIG. 9.

Three-fourths inch Reservoir Union, complete.

No.	
2.	Union Swivel.
3.	Union Nut.
4.	Union Stud.

FIG. 10.

One-inch Reservoir Union, complete.

No.	
2.	Union Swivel.
3.	Union Nut.
4.	Union Stud.

FIG. 11.

One and One-fourth inch Reservoir Union, complete.

No.	
2.	Union Swivel.
3.	Union Nut.
4.	Union Stud.

PLATE G14.

PRESSURE HEADS FOR BRAKE CYLINDERS.

Fig. 1.

Fig. 2.

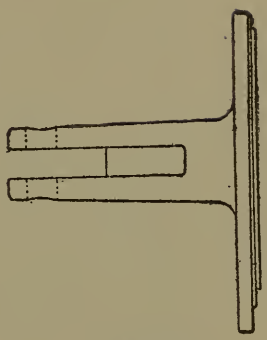

Fig. 3.

Fig. 4.

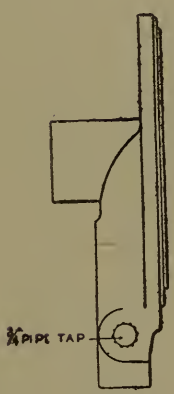

Fig. 5.

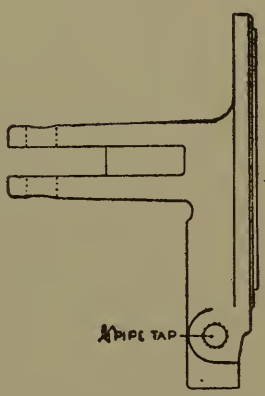

Fig. 6.

EXPLANATION OF TYPES ILLUSTRATED.

Fig. 1. Type O—Plain Head.
Fig. 2. Type P—Plain Head with Slack Adjuster Lug.
Fig. 3. Type Q—Bracket Head.
Fig. 4. Type R—Quick-Action Triple Valve Head.
Fig. 5. Type S—Quick-Action Triple Valve Head with Slack Adjuster Lug.
Fig. 6. Type T—Quick-Action Triple Valve Head with Bracket.

PLATE F 15.

STANDARD PUSH-DOWN TYPE DRIVER-BRAKE CYLINDERS.

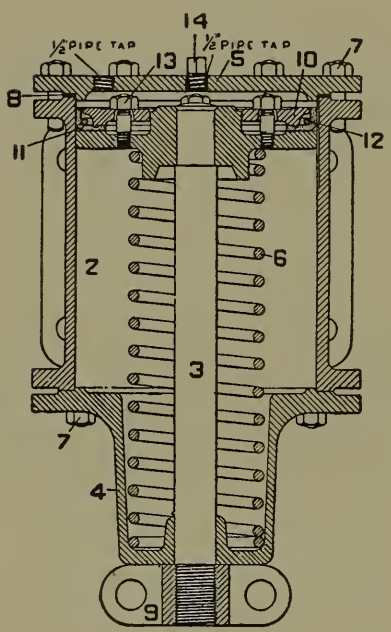

OUTER FLANGES FULL.

Cylinder No.	Diameter.		Stroke.
11	8 in.	x	7 in.
13	12 "	x	8 "
15	12 "	x	10 "
30	10 "	x	6 "
33	8 "	x	6 "
35	10 "	x	10 "
39	12 "	x	12 "
42	14 "	x	12 "
47	16 "	x	12 "
48	6 "	x	8 "
49	12 "	x	7 "
50	13 "	x	12 "
51	10 "	x	6 "
55	10 "	x	8 "
66	6 "	x	6 "
99	10 "	x	12 "

OUTER FLANGES REMOVED.

Cylinder No.	Diameter.		Stroke.
22	8 in.	x	7 in.
31	10 "	x	6 "
36	10 "	x	10 "
40	12 "	x	12 "
44	8 "	x	6 "
77	6 "	x	6 "
88	10 "	x	8 "

No.
2. Cylinder Body.
3. Piston and Rod (includes Follower Studs and Nuts).
4. Non-Pressure Head.
5. Pressure Head.
6. Release Spring.
7. Cylinder-Head Bolt and Nut.
8. Cylinder Gasket.

No.
9. Cross Head (select kind desired from Plate F 22).
10. Follower.
11. Packing Leather.
12. Packing Expander.
13. Follower Stud and Nut.
14. Oil Plug.

PLATE F 17.

STANDARD PUSH-UP TYPE DRIVER-BRAKE CYLINDERS.

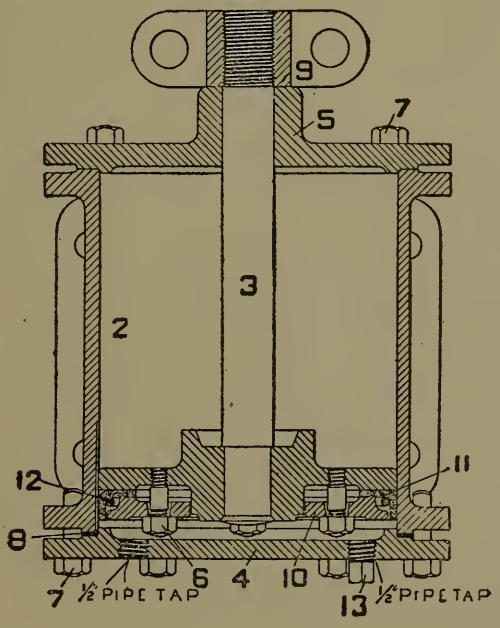

OUTER FLANGES FULL.				OUTER FLANGES REMOVED.			
Cylinder No.	Diameter.		Stroke.	Cylinder No.	Diameter.		Stroke.
16	8 in.	x	7 in.	17	8 in.	x	7 in.
18	10 "	x	8 "	19	10 "	x	8 "
23	12 "	x	10 "				
46	12 "	x	8 "				

No.

2. Cylinder Body.
3. Piston and Rod (includes Follower Studs and Nuts).
4. Pressure Head.
5. Non-Pressure Head.
6. Follower Stud and Nut.
7. Cylinder-Head Bolt and Nut.

No.

8. Cylinder Gasket.
9. Cross Head (select kind desired from Plate F 22).
10. Follower.
11. Packing Leather.
12. Packing Expander.
13. Oil Plug.

PLATE F19.

STANDARD TYPE "B" PUSH DRIVER-BRAKE CYLINDERS.

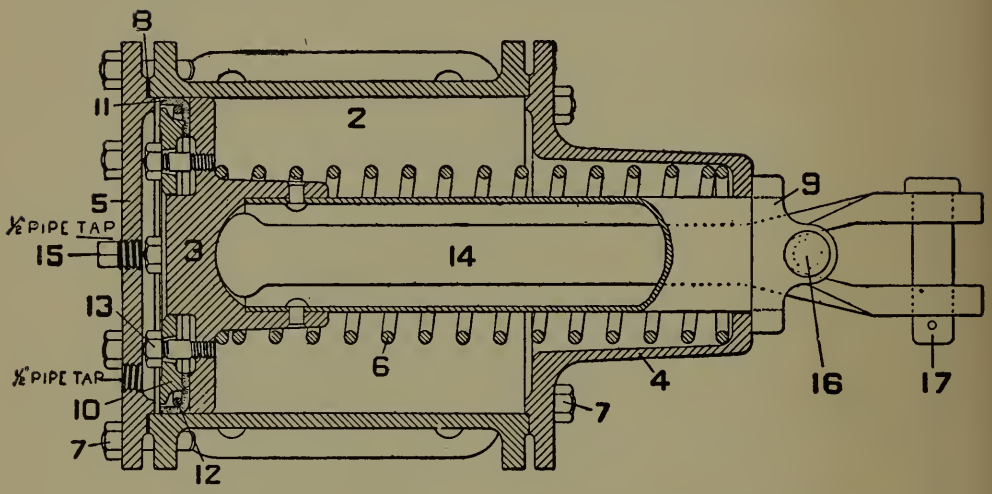

OUTER FLANGES FULL.			
Cylinder No.	Diameter.		Stroke.
11-B	8 in.	x	7 in.
13-B	12 "	x	8 "
15-B	12 "	x	10 "
21-B	14 "	x	10 "
33-B	8 "	x	6 "
35-B	10 "	x	10 "
39-B	12 "	x	12 "
42-B	14 "	x	12 "
47-B	16 "	x	12 "
48-B	6 "	x	8 "
49-B	12 "	x	7 "
50-B	13 "	x	12 "
51-B	10 "	x	6 "
55-B	10 "	x	8 "
90-B	10 "	x	12 "

OUTER FLANGES REMOVED.			
Cylinder No.	Diameter.		Stroke.
22-B	8 in.	x	7 in.
36-B	10 "	x	10 "
44-B	8 "	x	6 "
88-B	10 "	x	8 "

No.
2. Cylinder Body.
3. Piston and Rod (includes No. 9, and Follower Studs and Nuts).
4. Non-Pressure Head.
5. Pressure Head.
6. Release Spring.
7. Cylinder-Head Bolt and Nut.
8. Cylinder Gasket.
9. Push-Rod Holder.

No.
10. Follower.
11. Packing Leather.
12. Packing Expander.
13. Follower Stud and Nut.
14. Push Rod, complete (includes Nos. 15 and 16).
15. Oil Plug.
16. Push-Rod-Holder Pin, with Cotter
17. Push-Rod Pin, with Cotter.

PLATE F 20.

STANDARD TYPE "C" PUSH DRIVER-BRAKE CYLINDERS.

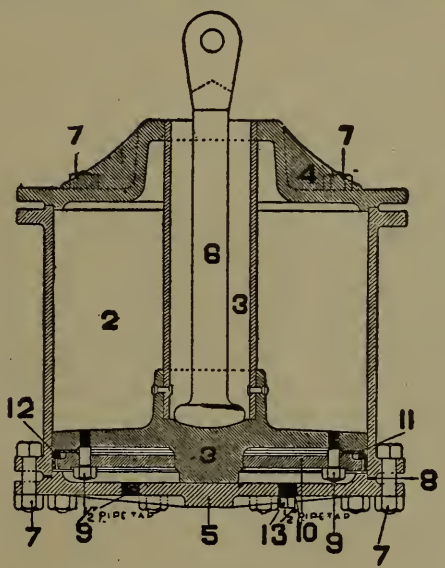

OUTER FLANGES FULL.

Cylinder No.	Diameter.		Stroke.
11-C	8 in.	x	7 in.
13-C	12 "	x	8 "
15-C	12 "	x	10 "
21-C	14 "	x	10 "
30-C	10 "	x	6 "
33-C	8 "	x	6 "
35-C	10 "	x	10 "
39-C	12 "	x	12 "
42-C	14 "	x	12 "
55-C	10 "	x	8 "
99-C	10 "	x	12 "

OUTER FLANGES REMOVED.

Cylinder No.	Diameter.		Stroke.
22-C	8 in.	x	7 in.
31-C	10 "	x	6 "
36-C	10 "	x	10 "
44-C	8 "	x	6 "
88-C	10 "	x	8 "

No.

2. Cylinder Body.
3. Piston and Rod (includes Follower Studs and Nuts).
4. Non-Pressure Head.
5. Pressure Head.
6. Push Rod, complete.
7. Cylinder-Head Bolt and Nut.

No.

8. Cylinder Gasket.
9. Follower Stud and Nut.
10. Follower.
11. Packing Leather.
12. Packing Expander.
13. Oil Plug.

PLATE F 21.

STANDARD TYPE "D" ENGINE-TRUCK BRAKE CYLINDERS.

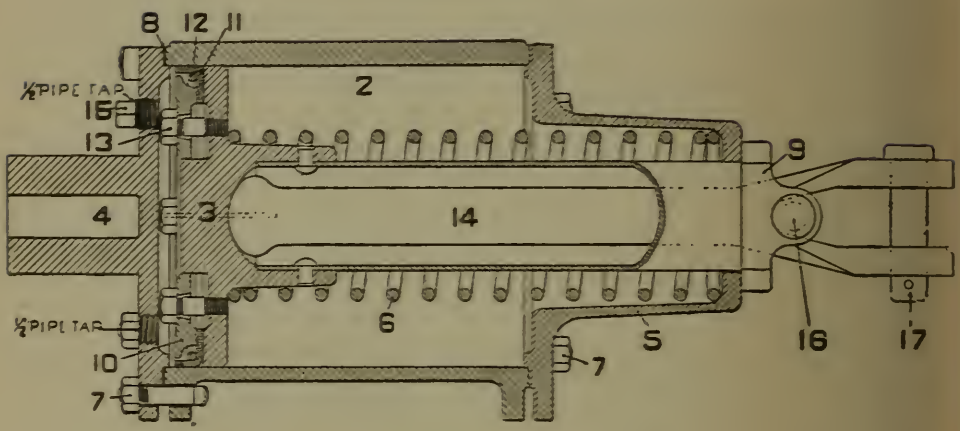

Cylinder No.	Diameter		Stroke.
11-D	8 in.	x	7 in.
35-D	10 "	x	10 "
43-D	8 "	x	12 "
48-D	6 "	x	8 "
49-D	12 "	x	7 "
55-D	10 "	x	8 "
66-D	6 "	x	6 "
99-D	10 "	x	12 "

No.
2. Cylinder Body.
3. Piston and Rod (includes No. 9, and Follower Studs and Nuts).
4. Pressure Head.
5. Non-Pressure Head.
6. Release Spring.
7. Cylinder-Head Bolt and Nut.
8. Cylinder Gasket.
9. Push-Rod Holder.

No.
10. Follower.
11. Packing Leather.
12. Packing Expander.
13. Follower Stud and Nut.
14. Push Rod, complete (includes Nos. 15 and 16).
15. Oil Plug.
16. Push-Rod-Holder Pin, with cotter.
17. Push-Rod Pin, with cotter.

PLATE F 22. PISTON CROSS HEADS FOR DRIVER-BRAKE CYLINDERS.

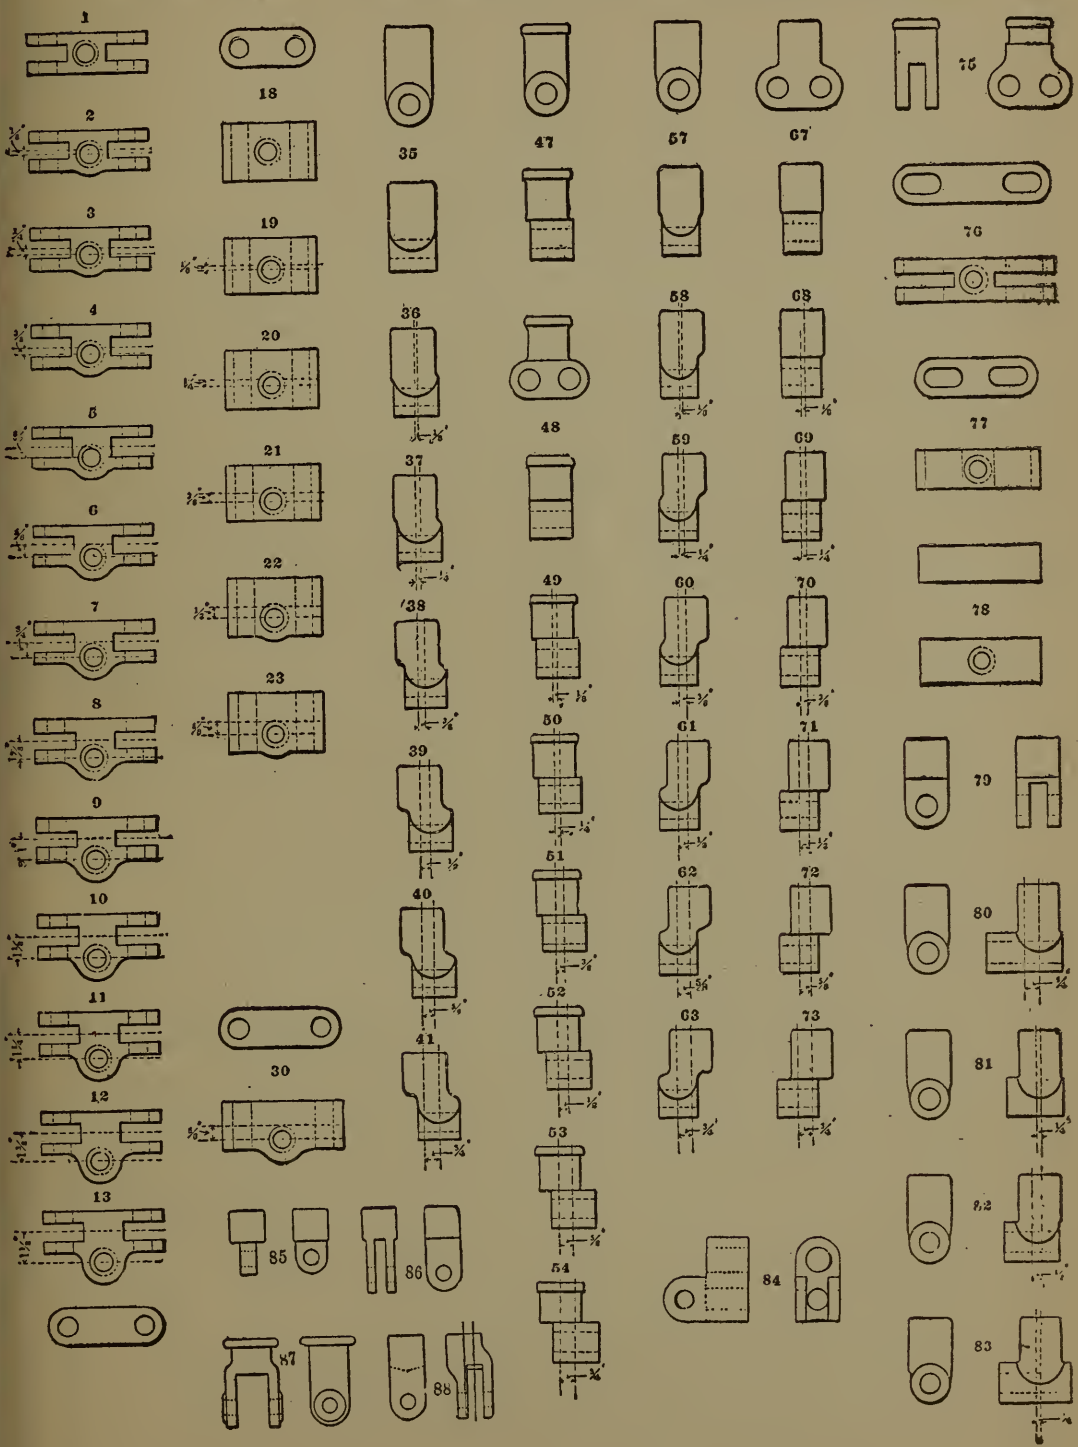

PLATE G23. RESERVOIRS.

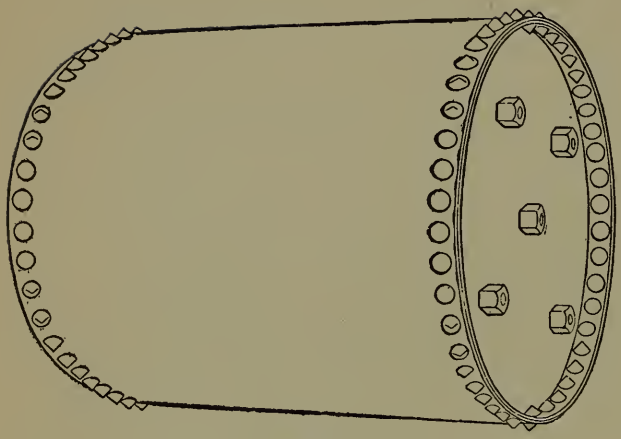

Fig. 1.

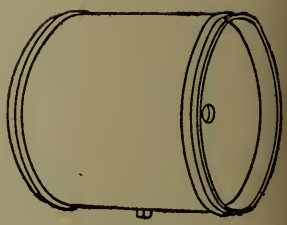

Fig. 4.

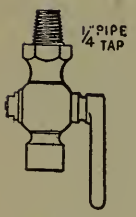

Fig. 5.

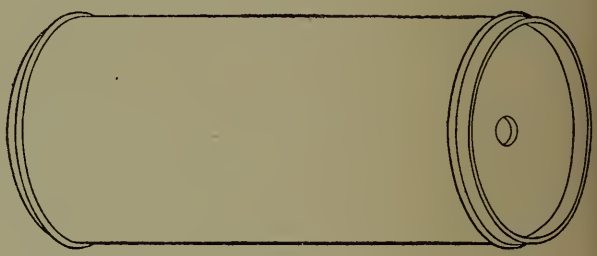

Fig. 2.

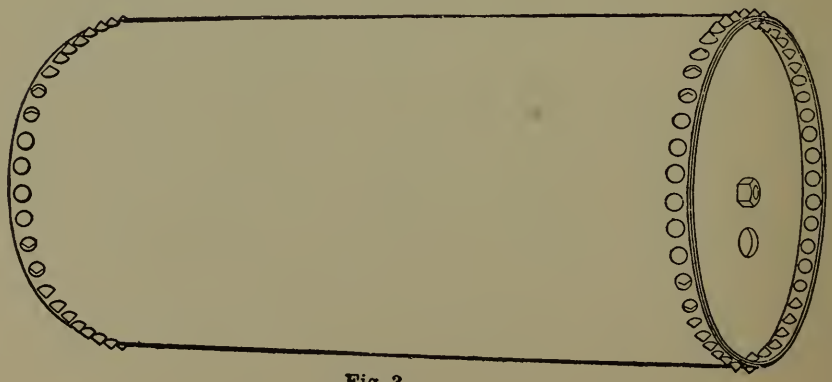

Fig. 3.

PLATE G23.

RESERVOIRS.

FIG. 1. Main Reservoirs of the type illustrated, and of any desired length, are manufactured of the following standard diameters in inches, outside measurement; viz., 16, 18½, 20½, 22½, 24½, 26½, 28½, 30½, 32½, 34½, 36½ To ascertain approximate capacity in cubic inches, multiply the square of the inside diameter (which is ½ inch less than the size specified) by .7854, and the product by the length, less an allowance of three inches to cover flanges.

Main-Reservoir capacity for Passenger Engines should not be less than 20,000 cubic inches, and for Freight Engines, not less than 40,000 cubic inches.

FIG. 2. Standard Auxiliary Reservoirs of the type illustrated are manufactured in the following sizes, and for use in connection with the Brake Cylinders specified:

10-in. by 24-in., for 8-in. Tender and Truck-Brake Cylinders.
10 " by 33 " " 8-in. Driver-Brake Cylinders.
12 " by 33 " " 10-in. Brake Cylinders of all kinds.
14 " by 33 " " 12-in. " " " "
16 " by 33 " " 14-in. " " " "

Auxiliary Reservoirs are tapped for pipe connections as follows: 10-in. by 24-in., for ½-inch pipe, all others for ¾-inch pipe.

FIG. 3. Special Auxiliary Reservoir of the type illustrated, 18½-in. by 41-in. For 16-inch Driver-Brake Cylinders. Tapped for ¾-inch pipe.

FIG. 4. Equalizing Reservoir, 10-in. by 12-in. For use in connection with Engineer's Brake Valve. Tapped for ⅜-inch pipe.

FIG. 5. Reservoir Drain Cock.

PLATE G 24. PLAIN TRIPLE VALVE.

FOR 8-INCH, AND 10-INCH CYLINDERS

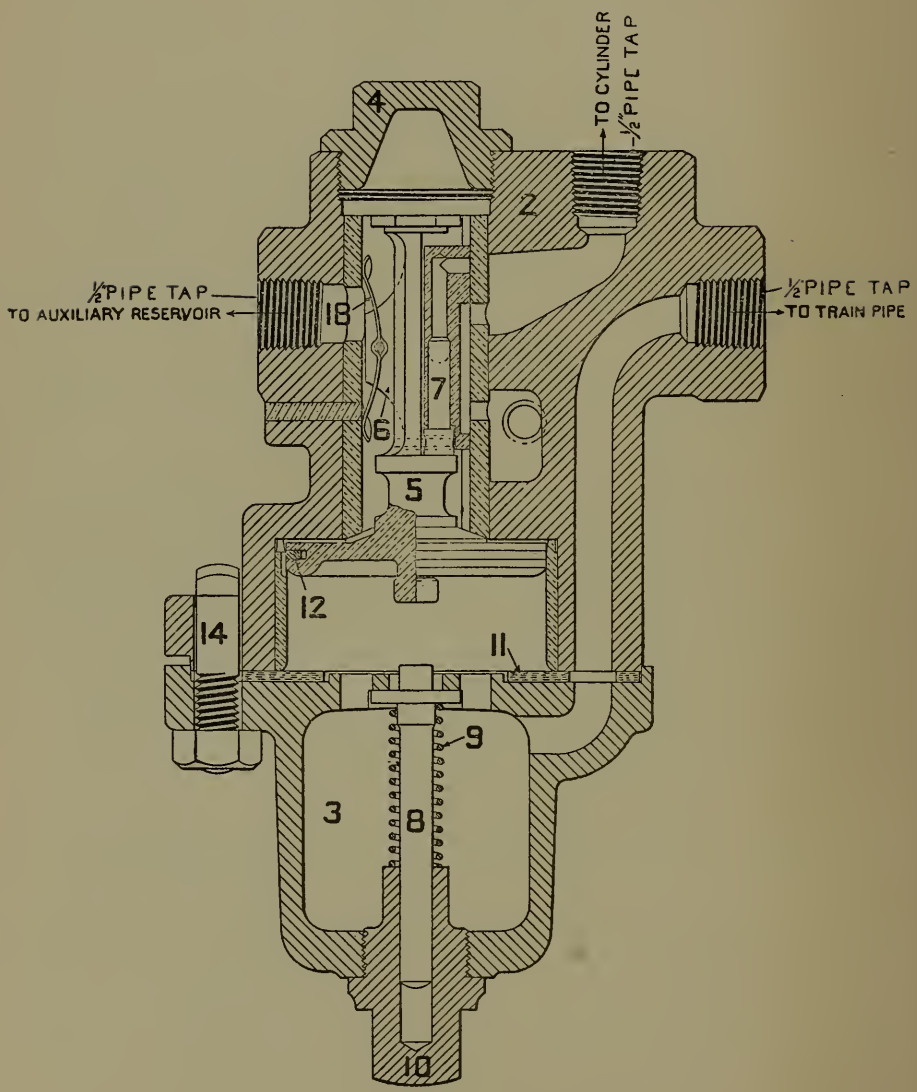

PLATE G 24.

PLAIN TRIPLE VALVE,

FOR 8-INCH, AND 10-INCH CYLINDERS.

No. 1. "G 24" Plain Triple Valve, complete.

No.	
2.	Triple-Valve Body (bushed)
3.	Cylinder Cap.
4.	Cap Nut.
5.	Piston (includes No. 12)
6.	Slide Valve.
7.	Graduating Valve.
8.	Graduating Stem.
9.	*Graduating Spring.
10.	Graduating-Stem Nut.
11.	Cylinder Gasket.
12.	Packing Ring.
14.	Bolt.
18.	Slide-Valve Spring.

*GRADUATING SPRING SPECIFICATIONS. Phosphor-Bronze Spring Wire, No. 14 B. W G.; $\frac{11}{1000}$ inches in diameter: 12 coils, 2 1/2 inches free height, $\frac{3}{64}$ inches inside diameter

PLATE F 25. PLAIN TRIPLE VALVE.

FOR 12-INCH, 14-INCH, AND 16-INCH DRIVER-BRAKE CYLINDERS.

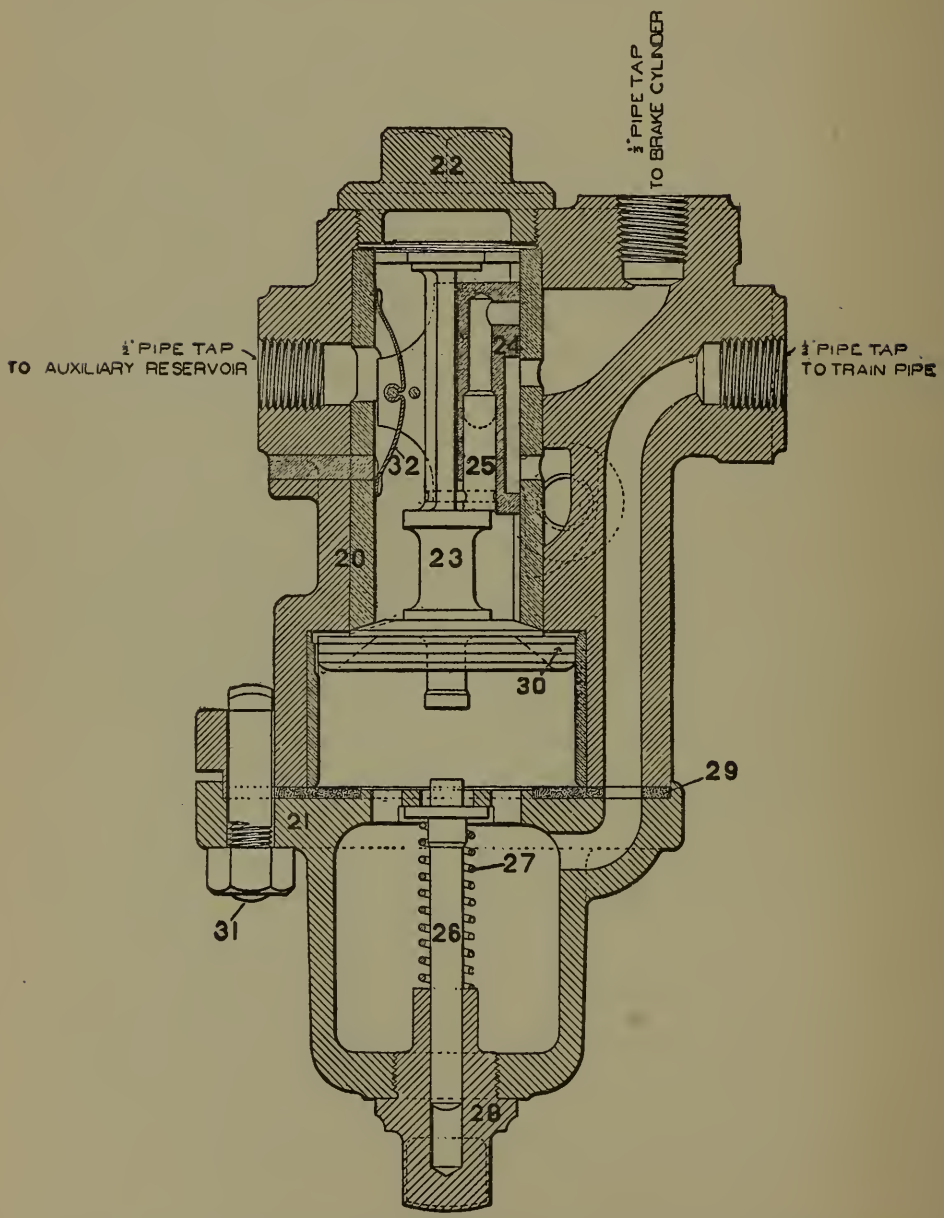

NOTE.—The "F 25" Plain Triple Valve should be used with 12-inch, 14-inch, and 16-inch Driver-Brake Cylinders, with or without Truck Brake; and for no other purpose.

PLATE F25.

PLAIN TRIPLE VALVE.

FOR 12-INCH, 14-INCH, AND 16-INCH DRIVER-BRAKE CYLINDERS.

No. 1. "F25" Plain Triple Valve, complete.

No.		No.	
20.	Triple-Valve Body (bushed).	27.	Graduating Spring.
21.	Cylinder Cap.	28.	Graduating-Stem Nut.
22.	Cap Nut.	29.	Cylinder Gasket.
23.	Piston (includes No. 30).	30.	Packing Ring.
24.	Slide Valve.	31.	Bolt and Nut.
25.	Graduating Valve.	32.	Slide-Valve Spring.
26.	Graduating Stem.		

PLATE G 26.

TENDER-BRAKE CYLINDERS.

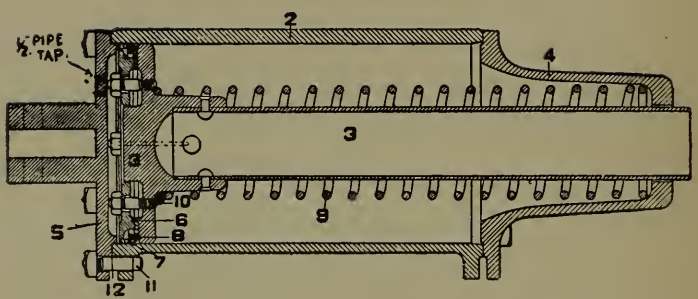

No. 1. Tender-Brake Cylinder, complete.

No.		No.	
2.	Cylinder Body.	7.	Packing Leather.
3.	Piston and Rod (includes Follower Studs and Nuts).	8.	Packing Expander
4.	Non-Pressure Head.	9.	Release Spring.
*5.	Pressure Head.	10.	Follower Stud and Nut
6.	Follower.	11.	Cylinder-Head Bolt and Nut.
		12.	Cylinder Gasket.

* NOTE.—For locomotive tenders, the light weight of which does not exceed 35,000 pounds, use the 8-inch Tender-Brake Cylinder; for tenders of greater weight, use the 10-inch size The style of cylinder head, illustrated above, viz., "Plain Head, with Slack-adjuster Lug," is considered standard.

PLATE F 27. QUICK-ACTION PASSENGER TRIPLE VALVE.

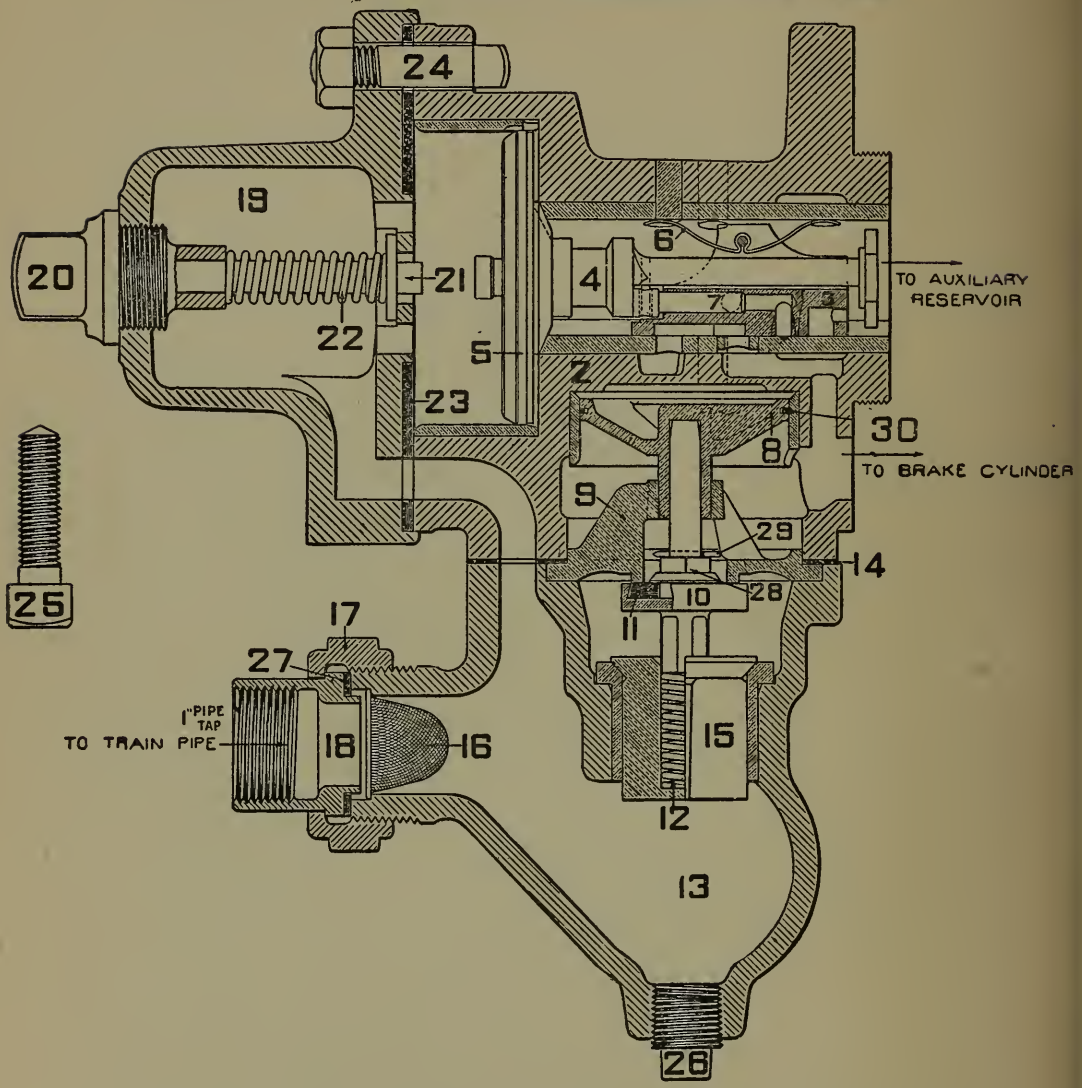

NOTE.—The "F 27" Triple Valve should be used in connection with the following apparatus only:

Passenger-Car Brake Cylinders, 10 inches AND LESS in diameter;

High-Speed Tender-Brake Cylinders, 10 inches in diameter.

Though similar in appearance, this valve differs essentially from the "F 36," or Freight Triple-Valve, and should never be employed in connection with Freight-Car Brakes. In common with the other Passenger Triple, "F 29," it may be distinguished from the Freight Triple by the fact that it has but one exhaust outlet while the "F 36" Valve has two. The three Quick-Action Triple-Valves may be identified also by the bore of the Slide-Valve Bush which measures 1 3/8 inches in the "F 27," 1 3/4 inches in the "F 29," and 1 1/4 inches in the "F 36" Valve.

PLATE F 27.

QUICK-ACTION PASSENGER TRIPLE VALVE.

No. 1. "F 27" Quick-Action Passenger Triple Valve, complete.

No.	
2.	Triple-Valve Body (bushed).
3.	Slide Valve.
4.	Piston (includes No. 5).
5.	Packing Ring.
6.	Slide-Valve Spring.
7.	Graduating Valve.
8.	Emergency-Valve Piston.
9.	Emergency-Valve Seat.
10.	Emergency Valve.
11.	Rubber Seat.
12.	Check-Valve Spring.
13.	Check-Valve Case (bushed).
14.	Check-Valve-Case Gasket.
15	Check Valve.
16.	Strainer.
17.	Union Nut.
18.	Union Swivel.
19.	Cylinder Cap.
20.	Graduating-Stem Nut.
21.	Graduating Stem.
22.	*Graduating Spring.
23.	Cylinder-Cap Gasket.
24.	Bolt and Nut.
25.	Half-inch Cap Screw.
26.	Half-inch Plug.
27.	Union Gasket.
28.	Emergency-Valve Nut.
29.	Cotter Pin.
30.	Emergency-Valve Piston Packing Ring.

*GRADUATING SPRING SPECIFICATIONS: Eight one hundredths ($\frac{8}{100}$) inches diameter, Nickeled Steel "Piano" Wire; 13 1/4 coils; 2 5/8 inches free height; $\frac{23}{64}$ inches inside diameter.

PLATE F28.

TEN-INCH PASSENGER-CAR BRAKE CYLINDERS.

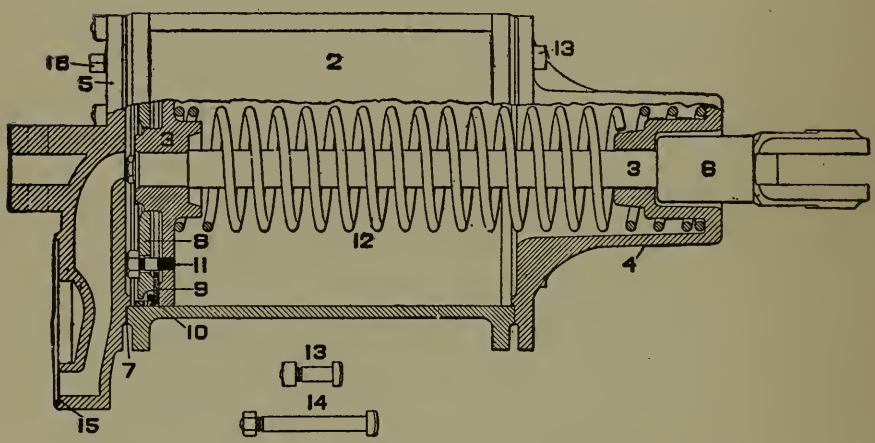

No. 1. Ten-inch Passenger-Car Brake Cylinder, complete.

No.
2. Cylinder Body.
3. Piston and Rod (includes Follower Studs and Nuts).
4. Non-Pressure Head.
5. Pressure Head (includes 2 of No. 14).
6. Cross Head.
7. Cylinder Gasket.
8. Follower.

No.
9. Packing Leather.
10. Packing Expander.
11. Follower Stud and Nut.
12. Release Spring.
13. Cylinder-Head Bolt and Nut.
14. Triple-Valve Bolt and Nut.
15. Triple-Valve Gasket.
16. Half-inch Plug.

PLATE F 29. QUICK-ACTION PASSENGER TRIPLE VALVE.

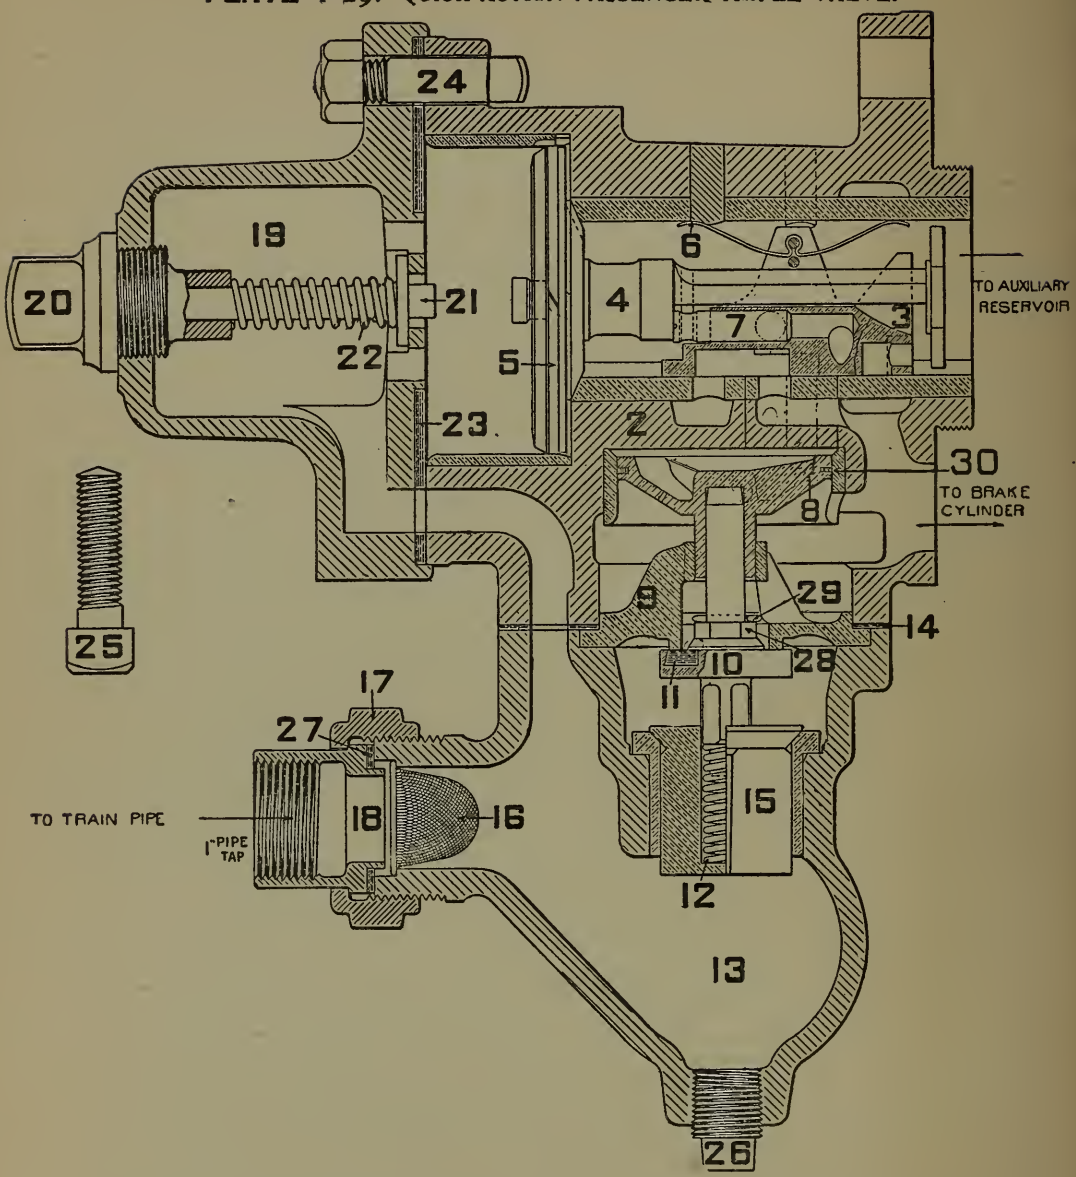

NOTE.—The "F 29" Triple Valve should be used in connection with Passenger-Car Brake Cylinders, 12 and 14 inches in diameter.

Though similar in appearance this valve differs essentially from both the "F 27" and "F 36" Triples, and should never be employed except as specified. It may be easily recognized by means of the letter "O" cast on the valve body. In common with the other Passenger Triple, "F 27," it may be distinguished from the Freight Triple by the fact that it has but one exhaust outlet while the "F 36" valve has two. The three Quick-Action Triple-Valves may be identified also by the bore of the Slide-Valve Bush which measures 1 3/8 inches in the "F 27," 1 3/4 inches in the "F 29," and 1 1/4 inches in the "F 36" Valve.

PLATE F29.

QUICK-ACTION PASSENGER TRIPLE VALVE.

No. 1. "F 29" Quick-Action Passenger Triple Valve, complete.

No.		No.	
2.	Triple-Valve Body (bushed).	17.	Union Nut.
3.	Slide Valve.	18	Union Swivel.
4.	Piston (includes No. 5).	19.	Cylinder Cap.
5.	Packing Ring.	20.	Graduating-Stem Nut.
6.	Slide-Valve Spring.	21.	Graduating Stem.
7.	Graduating Valve.	22.	*Graduating Spring.
8.	Emergency-Valve Piston.	23.	Cylinder-Cap Gasket.
9.	Emergency-Valve Seat.	24.	Bolt and Nut.
10.	Emergency Valve.	25.	Half-inch Cap Screw.
11.	Rubber Seat.	26.	Half-inch Plug.
12.	Check-Valve Spring.	27.	Union Gasket.
13.	Check-Valve Case (bushed).	28.	Emergency-Valve Nut.
14.	Check-Valve-Case Gasket.	29.	Cotter Pin.
15.	Check Valve.	30.	Emergency-Valve Piston Packing Ring.
16.	Strainer.		

*GRADUATING SPRING SPECIFICATIONS: Eight one hundredths ($\frac{8}{100}$) inches diameter Nickeled Steel "Piano" Wire; 13 1/4 coils; 2 5/8 inches free height; $\frac{23}{64}$ inches inside diameter.

PLATE F 30.

TWELVE-INCH PASSENGER-CAR BRAKE CYLINDER.

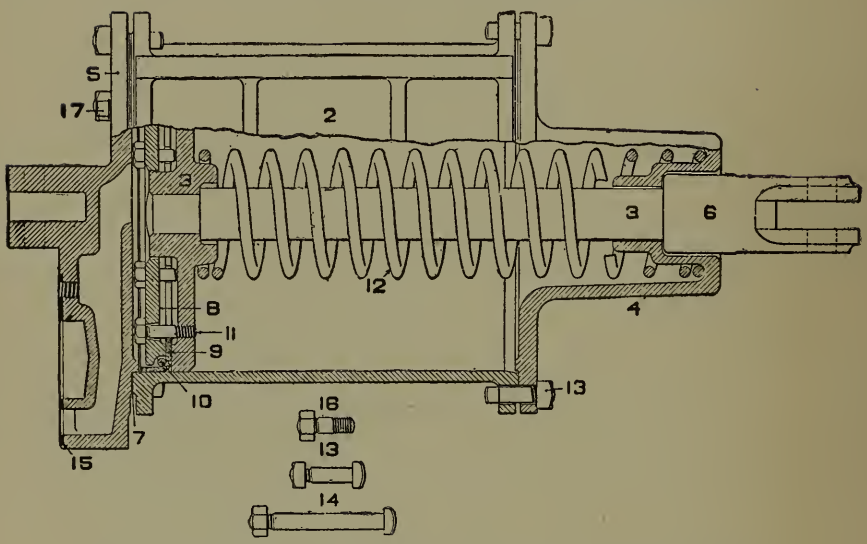

No. 1. Twelve-inch Passenger-Car Brake Cylinder, complete.

No.	
2.	Cylinder Body.
3.	Piston and Rod (includes Follower Studs and Nuts).
4.	Non-Pressure Head.
5.	Pressure Head (includes No. 16, and 2 of No. 14).
6.	Cross Head.
7.	Cylinder Gasket.
8.	Follower.
9.	Packing Leather.
10	Packing Expander.
11.	Follower Stud and Nut.
12.	Release Spring.
13.	Cylinder-Head Bolt and Nut.
14.	Triple-Valve Bolt and Nut.
15.	Triple-Valve Gasket.
16.	Triple-Valve Stud and Nut.
17.	Half-inch Plug.

PLATE F 31.

FOURTEEN-INCH PASSENGER-CAR BRAKE CYLINDER.

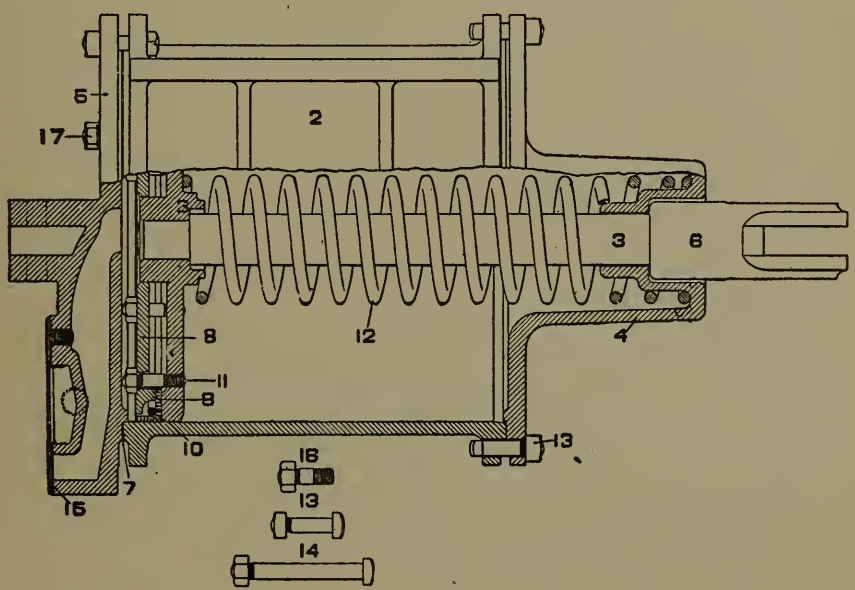

No. 1. Fourteen-inch Passenger-Car Brake Cylinder, complete.

No.	
2.	Cylinder Body.
3.	Piston and Rod (includes Follower Studs and Nuts)
4.	Non-Pressure Head.
5.	Pressure Head (includes No. 16, and 2 of No. 14).
6.	Cross Head.
7.	Cylinder Gasket.
8.	Follower.
9.	Packing Leather.
10.	Packing Expander.
11.	Follower Stud and Nut.
12.	Release Spring.
13.	Cylinder-Head Bolt and Nut.
14.	Triple-Valve Bolt and Nut.
15.	Triple-Valve Gasket.
16.	Triple-Valve Stud and Nut.
17.	Half-inch Plug.

PLATE G 32. DETAIL PARTS OF PASSENGER-CAR BRAKE APPARATUS.

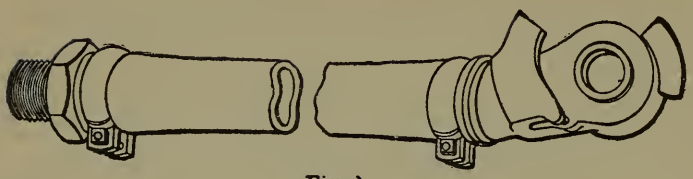

Fig. 1.

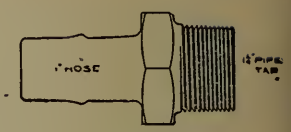

Fig. 3.

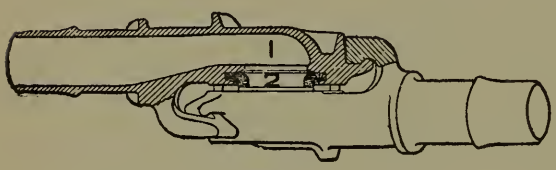

Fig. 2.

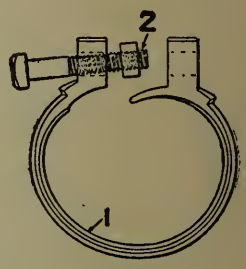

Fig. 4.

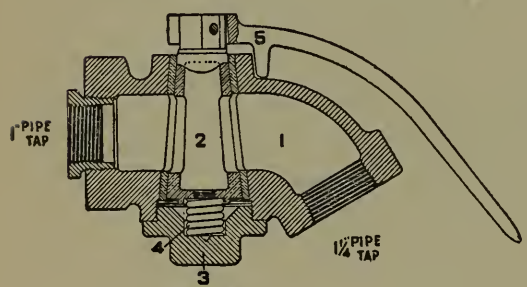

Fig. 5.

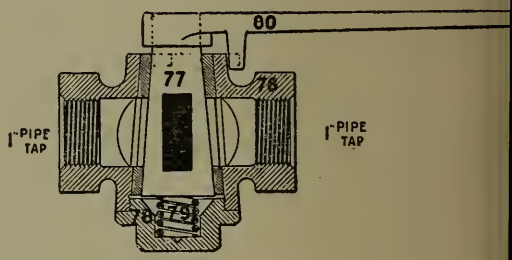

Fig. 6.

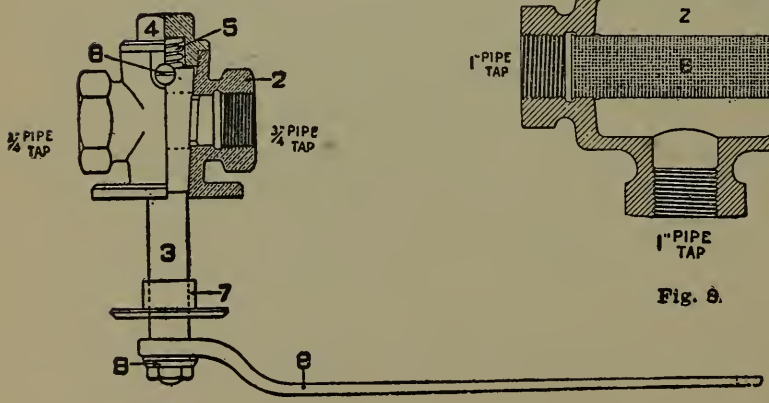

Fig. 7.

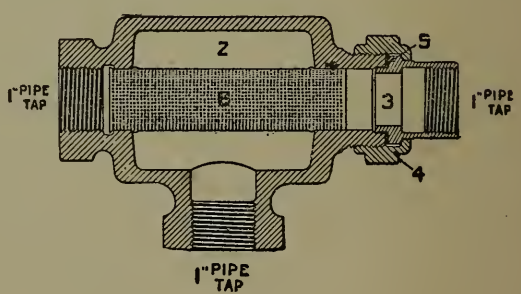

Fig. 8.

Fig. 9

PLATE G32.

DETAIL PARTS OF PASSENGER-CAR BRAKE APPARATUS.

FIG. 1.

Standard One-inch Hose and Coupling, complete.

Hose 22 inches long (order in pairs.)

FIG. 2.

Standard One-inch Hose Coupling (order in pairs).

No.
1. Hose-Coupling Case.
2. Hose-Coupling Packing Ring.

FIG. 3.

One-inch by One and One-fourth inch Hose Nipple.

FIG. 4.

One-inch Hose Clamp, complete.

No.
1. One-inch Hose Clamp.
2. One-inch Hose-Clamp Bolt.

FIG. 5.

One-inch by One and One-fourth inch Angle Cock, complete.

No.
1. Angle-Cock Body.
2. Angle-Cock Key.
3. Angle-Cock Cap.
4. Angle-Cock-Key Spring.
5. Angle-Cock Handle.
6. One and One-fourth inch to One-inch Reducer.

FIG. 6.

One-inch Cut-out Cock, complete.

No.
76. Cock Body.
77. Cock Key.
78. Cock Cap.
79. Key Spring.
80. Handle.

FIG. 7.

Conductor's Valve, complete.

No.
2. Valve Body.
3. Valve Key.
4. Valve Cap.
5. Key Spring.
6. Key Stop.
7. Key Escutcheon.
8. Valve Handle.
9. Key Nut.

FIG. 8.

One-inch Brake-Pipe Air Strainer, complete.

No.
2. Strainer Body.
3. One-inch Union Swivel.
4. Union Nut.
5. Union Gasket.
6. Strainer.

FIG. 9.

One-inch Dummy Coupling.

PLATE F 33.

Westinghouse Standard Train Air-Signal Equipment.—*Opposite.*

SIGNAL EQUIP

PLATE F 33.

WESTINGHOUSE STANDARD TRAIN AIR-SIGNAL EQUIPMENT.

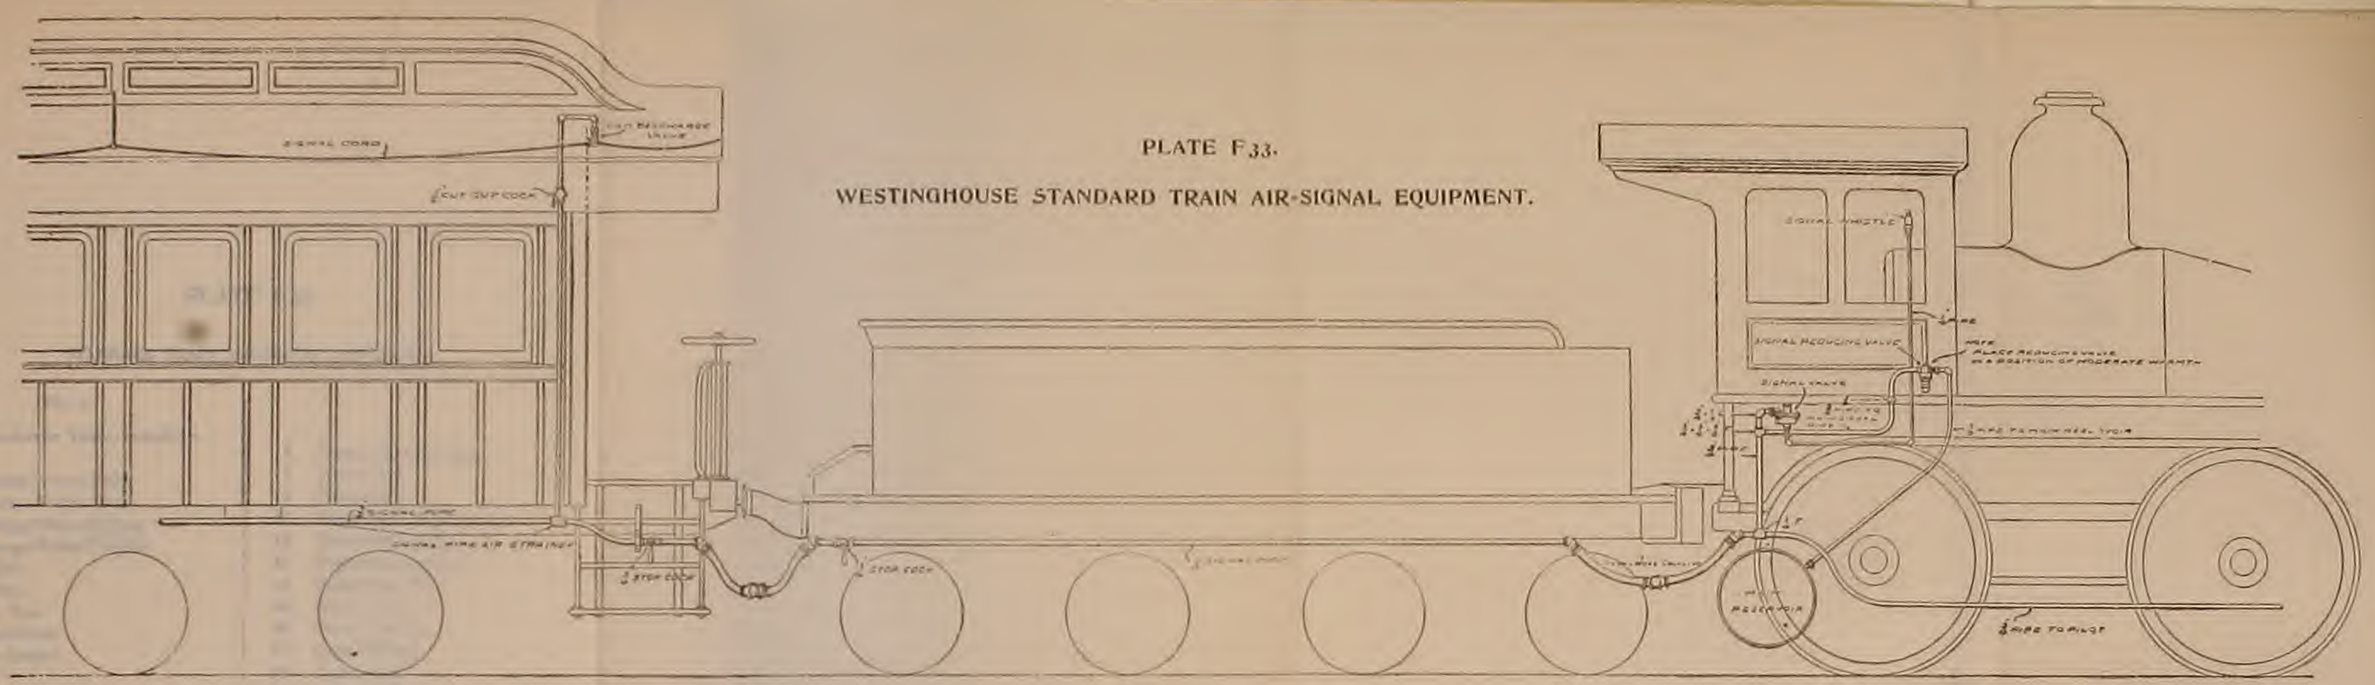

NOTE.
THE ABOVE DIAGRAM IS SIMPLY ILLUSTRATIVE OF THE METHOD OF ARRANGING THE CURRENT USED AIR TRAIN SIGNALING APPLIANCES, AND MAY BE MODIFIED AS THE CONSTRUCTION OF THE ENGINE DEMANDS.

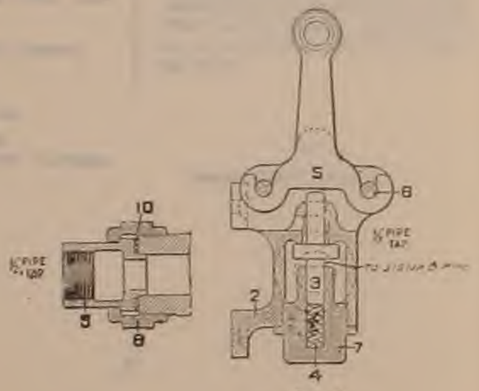

FIG. 1

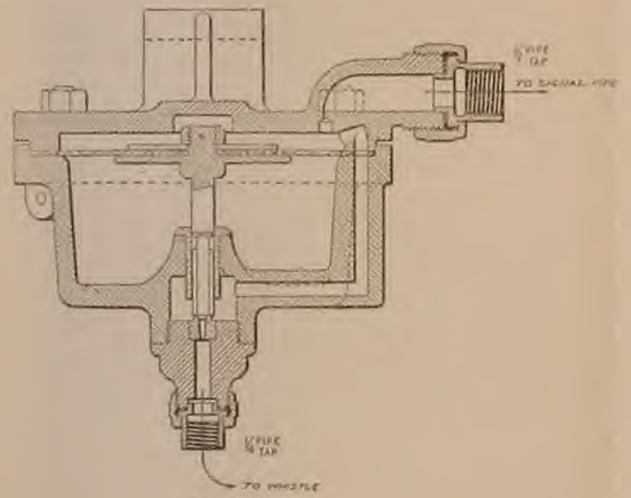

FIG. 2

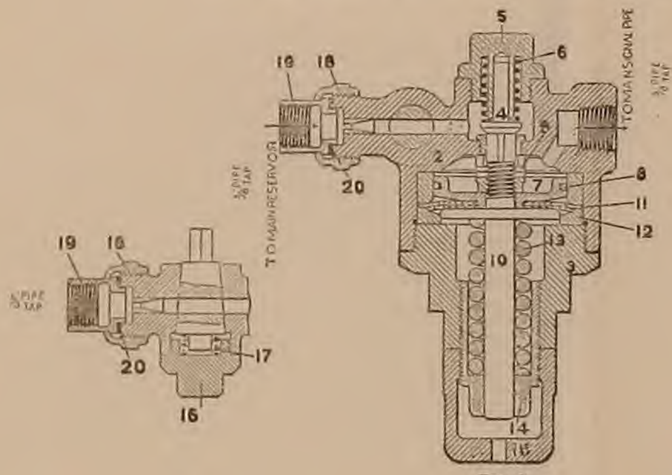

FIG. 3

FIG. 4

PLATE F 33.

STANDARD TRAIN AIR-SIGNAL APPARATUS.

FIG. 1.

Car Discharge Valve, complete.

No.
2. Discharge-Valve Body.
3. Discharge-Valve Stem.
4. Discharge-Valve Spring.
5. Discharge-Valve Handle.
6. Stop Pin.
7. Cap Nut.
8. Union Nut.
9. Union Swivel.
10. Union Gasket.

FIG. 2.

Signal Valve, complete.

FIG. 3.

***Improved Reducing Valve, complete.**

No.
2. Reducing-Valve Body (bushed).
3. Spring Box.
4. Supply Valve.
5. Supply-Valve Cap Nut.
6. Supply-Valve Spring.
7. Reducing-Valve Piston (includes No. 8).
8. Piston Packing Ring
9. Piston Nut.
10. Piston Rod.
11. Diaphragm (two pieces).
12. Diaphragm Ring
13. Regulating Spring.
14. Regulating Nut.
15. Check Nut.
16. Cock Cap Nut.
17. Cock Spring.
18. Union Nut.
19. Union Swivel.
20. Union Gasket.

*The improved Reducing Valve is adjusted to govern Train Signal-Pipe Pressure AT A MAXIMUM OF 40 POUNDS PER SQUARE INCH, and any necessary readjustment must be made for that pressure in order to secure the best results.

FIG. 4.

Signal Whistle, complete.

PLATE G 34. DETAIL PARTS OF TRAIN AIR-SIGNAL APPARATUS.

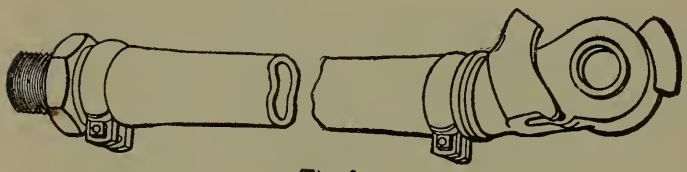

Fig. 1.

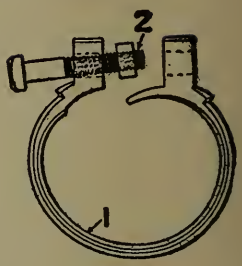

Fig. 3.

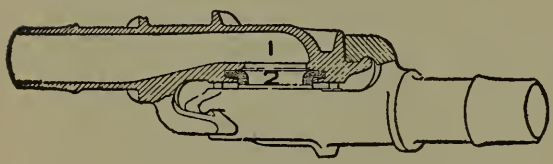

Fig. 2.

Fig. 4.

Fig. 5.

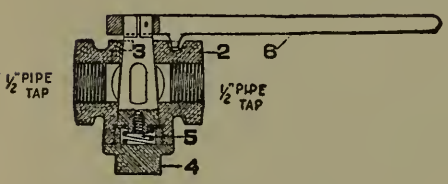

Fig. 6.

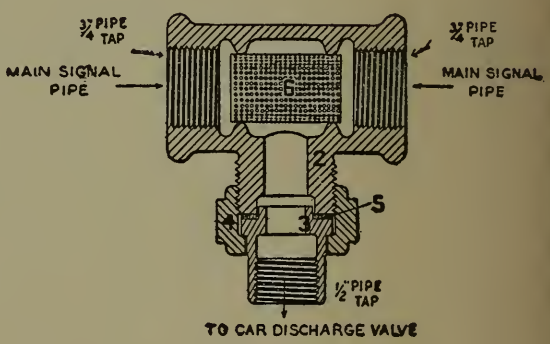

Fig. 7.

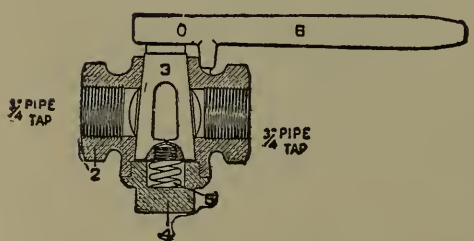

Fig. 8.



Fig. 9.

PLATE G34.

DETAIL PARTS OF TRAIN AIR-SIGNAL APPARATUS.

FIG. 1.

Standard Signal Hose and Coupling, complete.

One-inch Hose, 22 inches long with fittings for ¾-inch pipe.

FIG. 2.

Standard Signal Hoso Coupling, complete (order in pairs).

No.
1. Signal Hose-Coupling Case.
2. Signal Hose-Coupling Packing Ring.

FIG. 3.

Signal Hose Clamp, complete.

No.
1. Signal Hose-Clamp Body.
2. Signal Hose-Clamp Bolt.

FIG. 4.

One-inch by Three-fourths inch Hose Nipple.

FIG. 5.

Three-fourths inch Angle Fitting.

FIG. 6.

One-half inch Cut-out Cock, complete.

No.
2. Cock Body.
3. Cock Key.
4. Cock Cap.
5. Key Spring.
6. Cock Handle.

FIG. 7.

Three-fourths inch Signal-Pipe Air Strainer, complete.

No.
2. Strainer Body.
3. Union Swivel.
4. Union Nut.
5. Union Gasket.
6. Strainer.

FIG. 8.

Three-fourths inch Cock, complete.

No.
2. Cock Body.
3. Cock Key.
4. Cock Cap.
5. Key Spring.
6. Cock Handle.

FIG. 9.

Signal Dummy Coupling.

PLATE G 35.

Westinghouse Standard Freight Car Brake Equipment.—*Opposite.*

G,
LY
NS

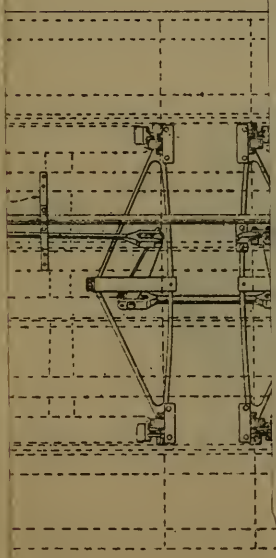

PLATE G35. WESTINGHOUSE STANDARD FREIGHT CAR BRAKE EQUIPMENT.

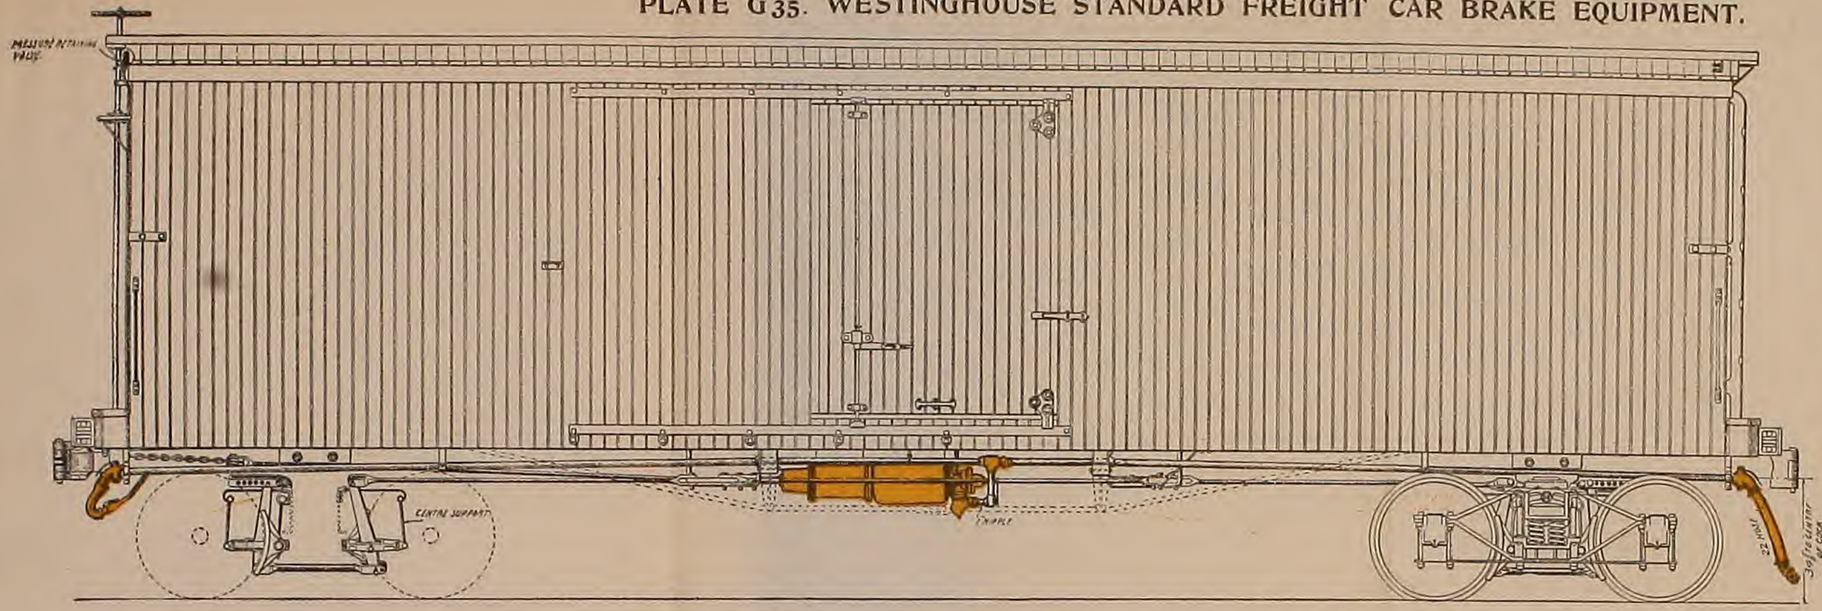

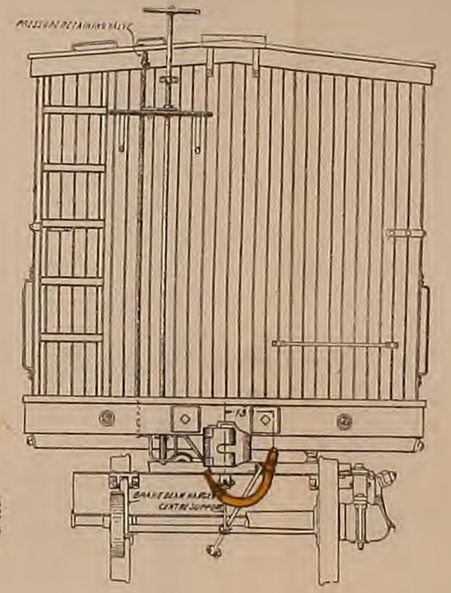

IMPORTANT SUGGESTIONS.

ALL BRAKE RODS, PINS, AND LEVERS ILLUSTRATED ARE M. C. B. STANDARD SIZES, AND NO DEVIATION THEREFROM SHOULD BE PERMITTED. IN PIPING, ELLS SHOULD NOT BE USED WHERE PRACTICABLE TO EMPLOY BENDS INSTEAD. REMOVE FINS CAREFULLY, BLOW OUT PIPES WITH STEAM, AND ATTACH FIRMLY TO CAR TIMBERS BY MEANS OF HEAVY CLAMPS. USE NO LEAD INSIDE OF SOCKETS; IF NEEDED, APPLY SPARINGLY ON OUTSIDE, AND TEST ALL CONNECTIONS UNDER PRESSURE WITH SOAPSUDS.

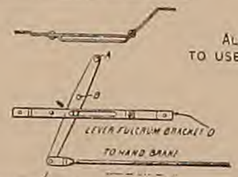

ALTERNATIVE ARRANGEMENT WHEN IT IS DESIRED TO USE HAND BRAKE ON BOTH ENDS OF THE CAR.

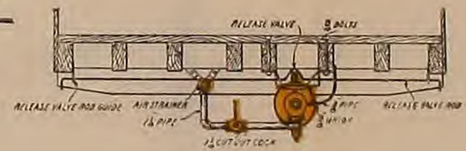

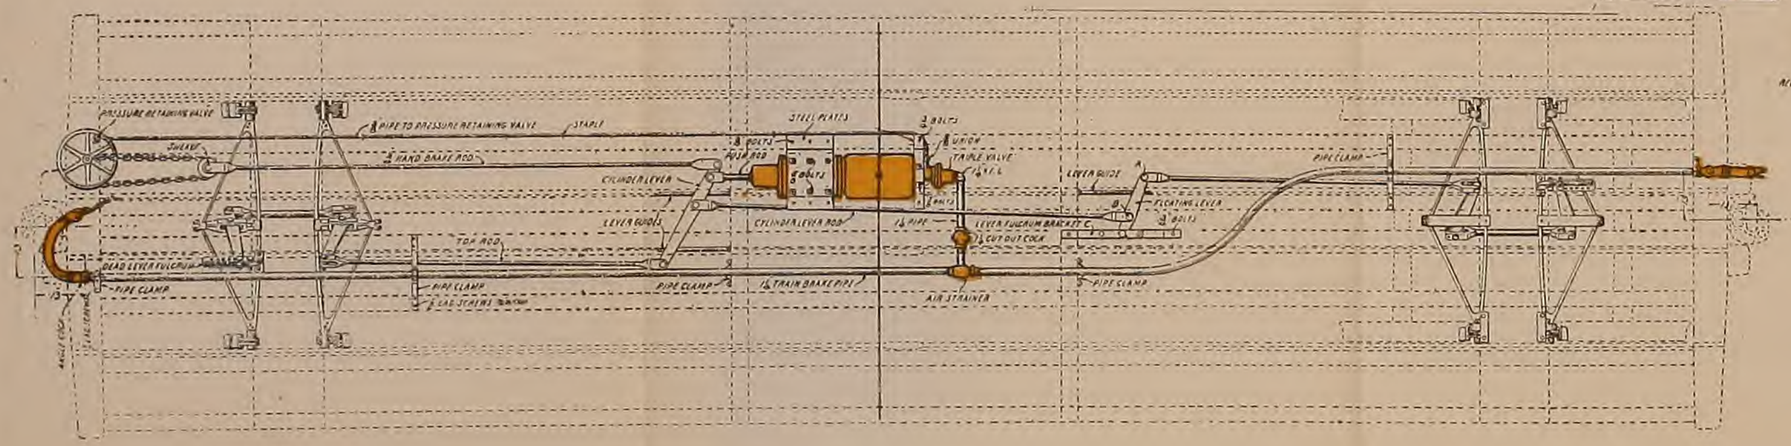

EXPLANATION OF TINTS.

STANDARD QUICK-ACTION AUTOMATIC BRAKE APPARATUS FURNISHED WITH COMPLETE FREIGHT-CAR EQUIPMENTS—"SCHEDULE H-1"—SHOWN IN ORANGE TINT.

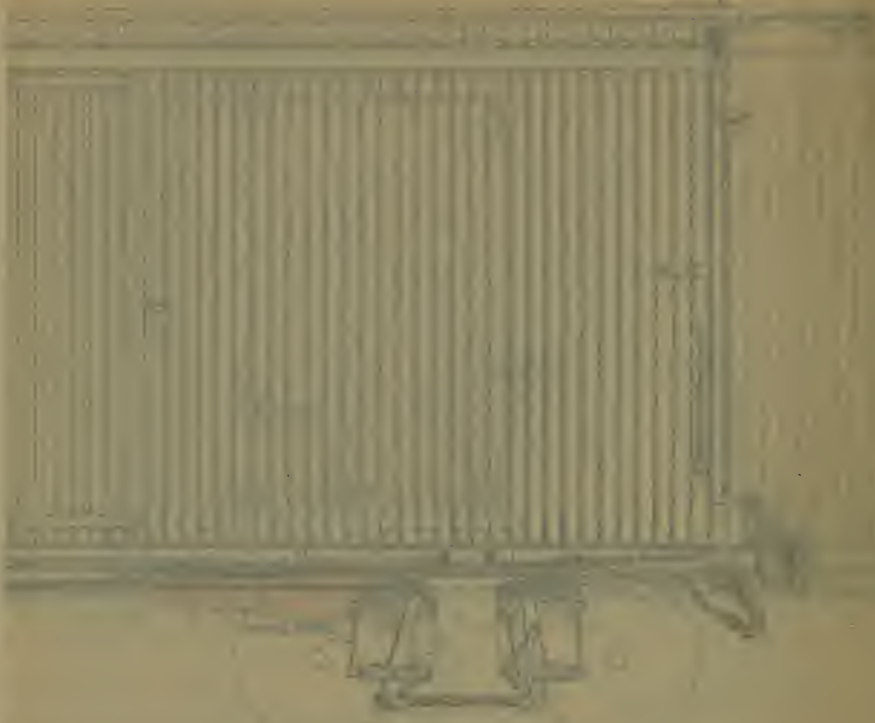

PLATE F 36. QUICK-ACTION FREIGHT TRIPLE VALVE.

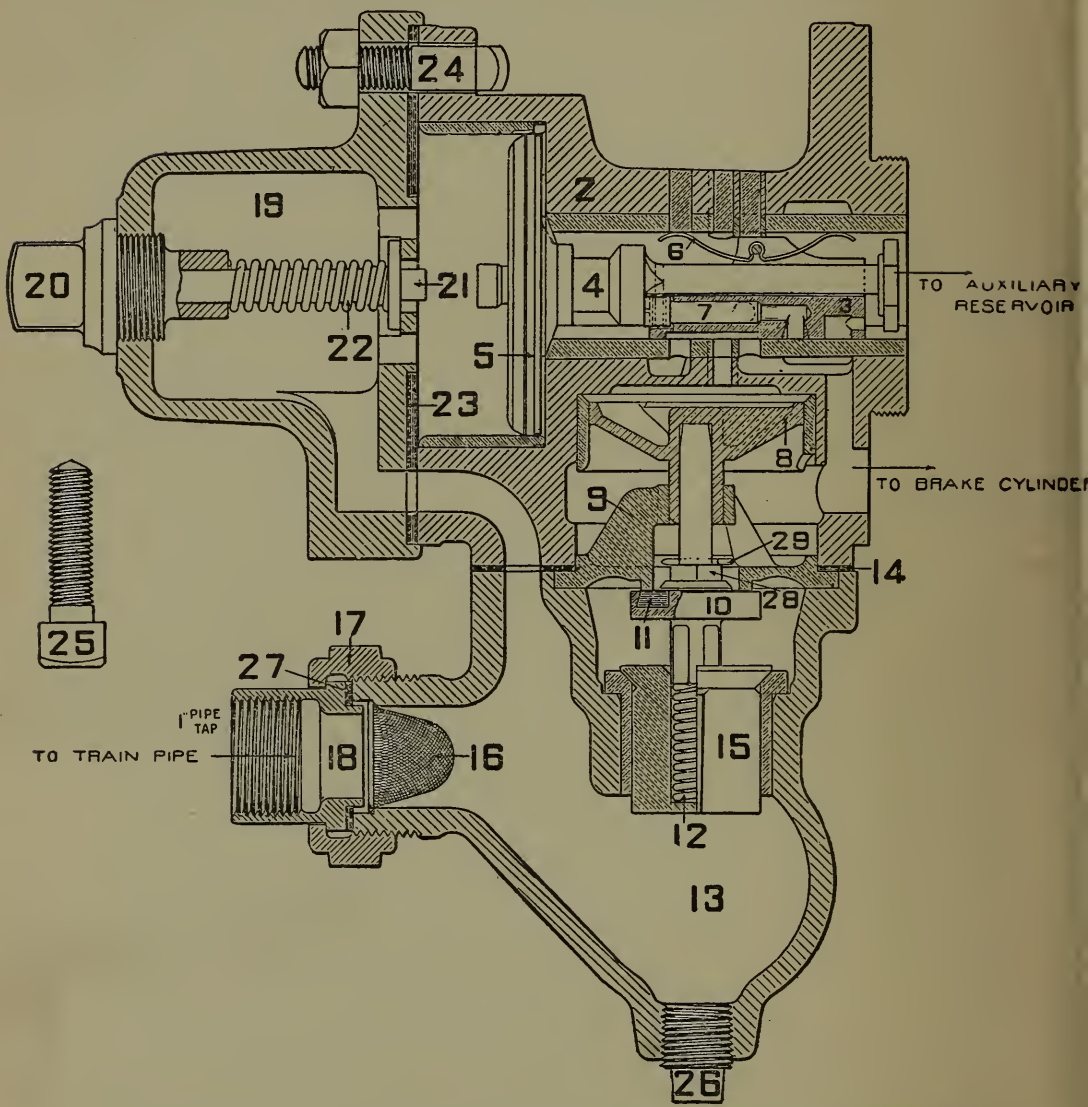

NOTE.—"F 36" Triple Valves should be used in connection with the following apparatus only:
Freight-Car Brake Cylinders, 6 inches and 8 inches in diameter.
High-Speed Tender-Brake Cylinders, 8 inches in diameter.

Though similar in appearance, this valve differs essentially from both the Passenger Triple Valves, and should never be employed except as specified. It may be distinguished from the "F 27" and "F 29" Quick-Action Triples by the fact that it has TWO exhaust outlets (one of which is plugged), and also by the bore of its Slide-Valve Bush, which is 1 1/4 inches in diameter.

PLATE F 36.

QUICK-ACTION FREIGHT TRIPLE VALVE.

No. 1. "F 36" Quick-Action Freight Triple Valve, complete.

No.	
2.	Triple-Valve Body (bushed).
3.	Slide Valve.
4.	Piston (includes No. 5).
5.	Packing Ring.
6.	Slide-Valve Spring.
7.	Graduating Valve.
8.	Emergency-Valve Piston.
9.	Emergency-Valve Seat.
10.	Emergency Valve.
11.	Rubber Seat.
12.	Check-Valve Spring.
13.	Check-Valve Case.
14.	Check-Valve-Case Gasket.
15.	Check Valve.
16.	Strainer.
17.	Union Nut.
18.	Union Swivel.
19.	Cylinder Cap.
20.	Graduating-Stem Nut.
21.	Graduating Stem.
22.	*Graduating Spring.
23.	Cylinder-Cap Gasket.
24.	Bolt and Nut.
25.	Half-inch Cap Screw.
26.	Half-inch Plug.
27.	Union Gasket.
28.	Emergency-Valve Nut.
29.	Cotter Pin.
30.	Plug for Exhaust Outlet.

*GRADUATING SPRING SPECIFICATIONS: Forty-nine one thousandths ($\frac{49}{1000}$) inches diameter, Nickeled Steel "Piano" Wire; 16 coils, 2 3/4 inches free height; $\frac{33}{64}$ inches inside diameter

PLATE F 37.

NARROW-GAUGE FREIGHT-CAR BRAKE CYLINDER AND AUXILIARY RESERVOIR COMBINED, WITH "F 36" TRIPLE VALVE.

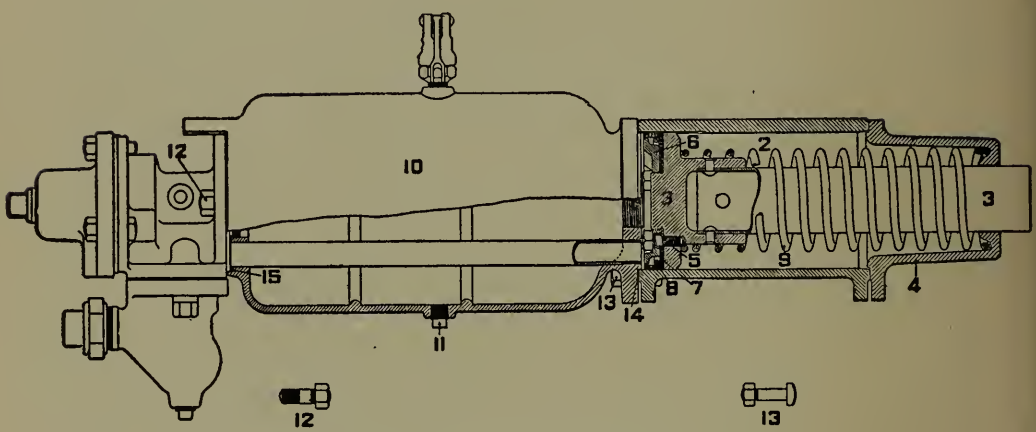

NOTE.—The "F 37" Brake Apparatus illustrated above is furnished with "Schedule H-4" for freight cars, the light weight of which does not exceed 15,000 pounds. The Brake Cylinder is 6 inches in diameter by 8 inches stroke.

No. 1. Narrow-Gauge Freight-Car Brake Cylinder and Auxiliary Reservoir Combined, with "F 36" Triple Valve, complete.

No.	
2.	Cylinder Body.
3.	Piston and Rod (includes Follower Studs and Nuts).
4.	Non-Pressure Head.
5.	Follower Stud and Nut.
6.	Follower.
7.	Packing Leather.
8.	Packing Expander.
9.	Release Spring.
10.	Reservoir (includes Nos. 11 and 12).
11.	Drain Plug.
12.	Reservoir Stud and Nut.
13.	Cylinder-Head Bolt and Nut.
14.	Cylinder Gasket.
15.	Triple-Valve Gasket.

PLATE F 38.

NARROW-GAUGE FREIGHT-CAR BRAKE CYLINDER AND AUXILIARY RESERVOIR, DETACHED, WITH "F 36" TRIPLE VALVE.

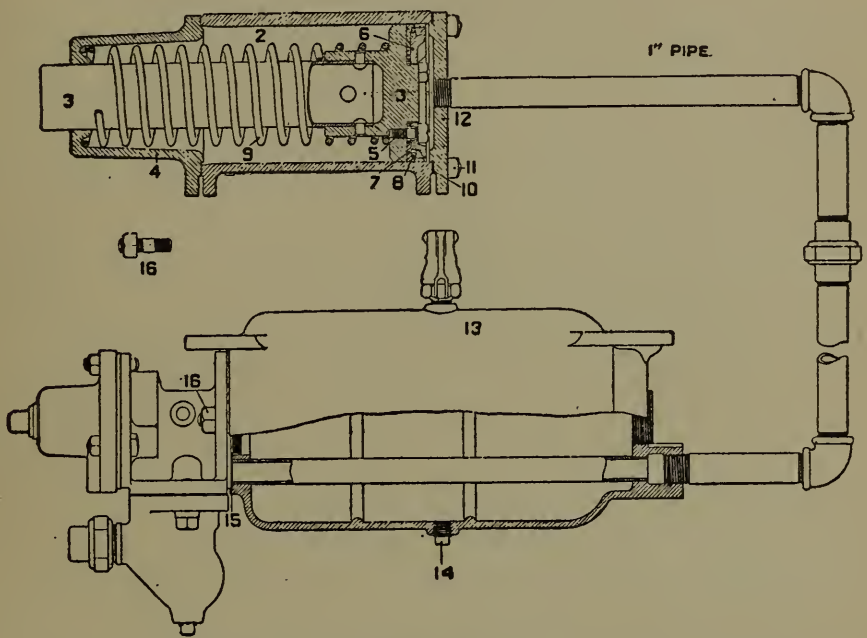

NOTE.—The "F 38" Brake Apparatus illustrated above is furnished with "Schedule H-5" for Freight Cars, the light weight of which does not exceed 15,000 pounds, but the construction of which prevents the application of the combined-cylinder-and-reservoir type of brake illustrated on Plate "F 37." The Brake Cylinder is 6 inches in diameter by 8 inches stroke.

Narrow-Gauge Freight-Car Brake Cylinder and Auxiliary Reservoir Detached, with "F 36" Triple Valve, complete.

No.		No.	
1.	Brake Cylinder, complete.	9.	Release Spring.
2.	Cylinder Body.	10.	Cylinder Gasket.
3.	Piston and Rod (includes Follower Studs and Nuts).	11.	Cylinder-Head Bolt and Nut.
4.	Back Head.	12.	Pressure Head.
5.	Follower Stud and Nut.	13.	Special Auxiliary Reservoir (includes Nos. 14 and 16).
6.	Follower.	14.	Drain Plug.
7.	Packing Leather.	15.	Triple-Valve Gasket.
8.	Packing Expander.	16.	Reservoir Stud and Nut.

PLATE F39.

"TWIN-CYLINDER" FREIGHT-CAR BRAKE APPARATUS WITH AUXILIARY RESERVOIR DETACHED, AND "F36" TRIPLE VALVE.

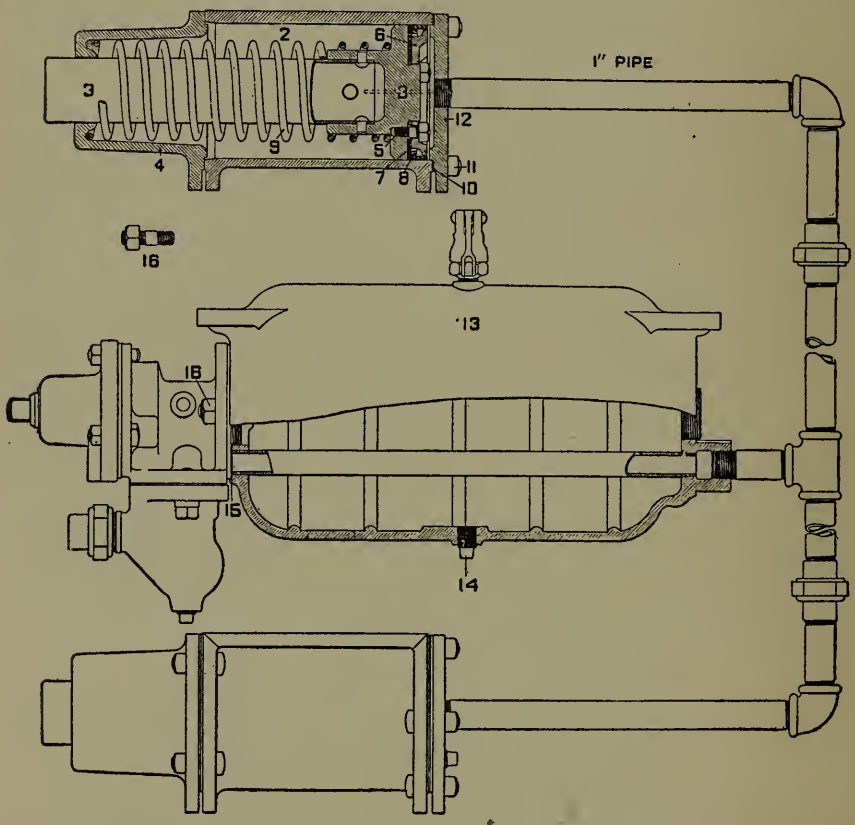

NOTE.—The "F 39" Brake Apparatus illustrated above is furnished with "Schedule H-6" for freight cars, the weight and construction of which prevents the use of a single-cylinder brake, either of the combined or detached type. Each of the cylinders illustrated is 6 inches in diameter by 8 inches stroke.

PLATE F39.

"TWIN-CYLINDER" FREIGHT-CAR BRAKE APPARATUS WITH AUXILIARY RESERVOIR DETACHED, AND "F36" TRIPLE VALVE.

"Twin-Cylinder" Freight-Car Brake Apparatus with Auxiliary Reservoir Detached, and "F36" Triple Valve, complete.

No.	
1.	Brake Cylinder, complete.
2.	Cylinder Body.
3.	Piston and Rod (includes Follower Studs and Nuts).
4.	Non-Pressure Head.
5.	Follower Stud and Nut.
6.	Follower.
7.	Packing Leather.
8.	Packing Expander.
9.	Release Spring.
10.	Cylinder Gasket.
11.	Cylinder-Head Bolt and Nut.
12.	Pressure Head.
13.	Special Auxiliary Reservoir (includes Nos. 14 and 16).
14.	Drain Plug.
15.	Triple-Valve Gasket.
16.	Reservoir Stud and Nut.

PLATE F 40.

STANDARD FREIGHT-CAR BRAKE CYLINDER AND AUXILIARY RESERVOIR COMBINED, WITH "F 36" TRIPLE VALVE.

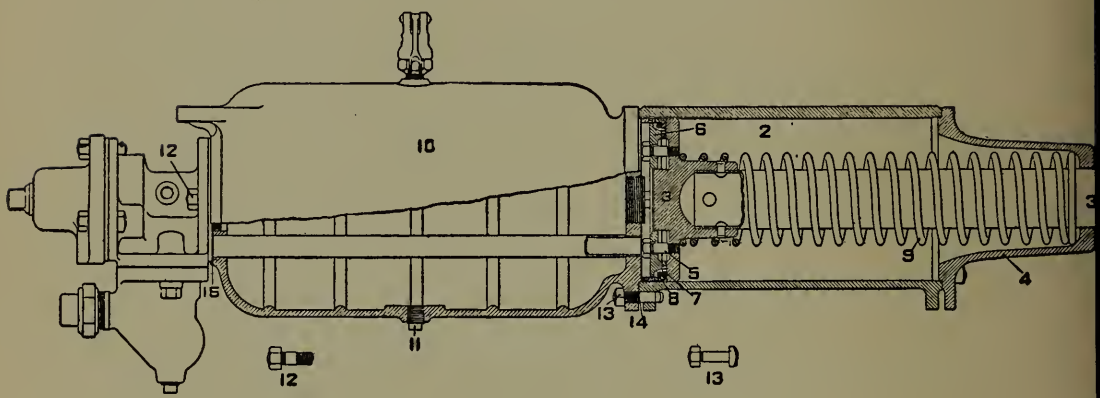

NOTE.—The "F 40" Brake Apparatus illustrated above is furnished with "Schedule H-1" for freight cars, the light weight of which exceeds 15,000 pounds. The brake cylinder is 8 inches in diameter by 12 inches stroke. Together with the additional fixtures included in "Schedule H-1," it constitutes the Standard Automatic-Brake Equipment for Freight Cars.

No. 1. Standard Freight-Car Brake Cylinder and Auxiliary Reservoir Combined, with "F 36" Triple Valve, complete.

No.		No.	
2.	Cylinder Body.	10.	Reservoir (includes Nos. 11 and 12).
3.	Piston and Rod (includes Follower Studs and Nuts).	11.	Drain Plug.
4.	Non-Pressure Head.	12.	Reservoir Stud and Nut.
5.	Follower Stud and Nut.	13.	Cylinder-Head Bolt and Nut.
6.	Follower.	14.	Cylinder Gasket.
7.	Packing Leather.	15.	Triple Valve Gasket.
8.	Packing Expander.		
9.	Release Spring.		

PLATE F 41.

STANDARD FREIGHT-CAR BRAKE CYLINDER AND AUXILIARY RESERVOIR DETACHED, WITH "F 36" TRIPLE VALVE.

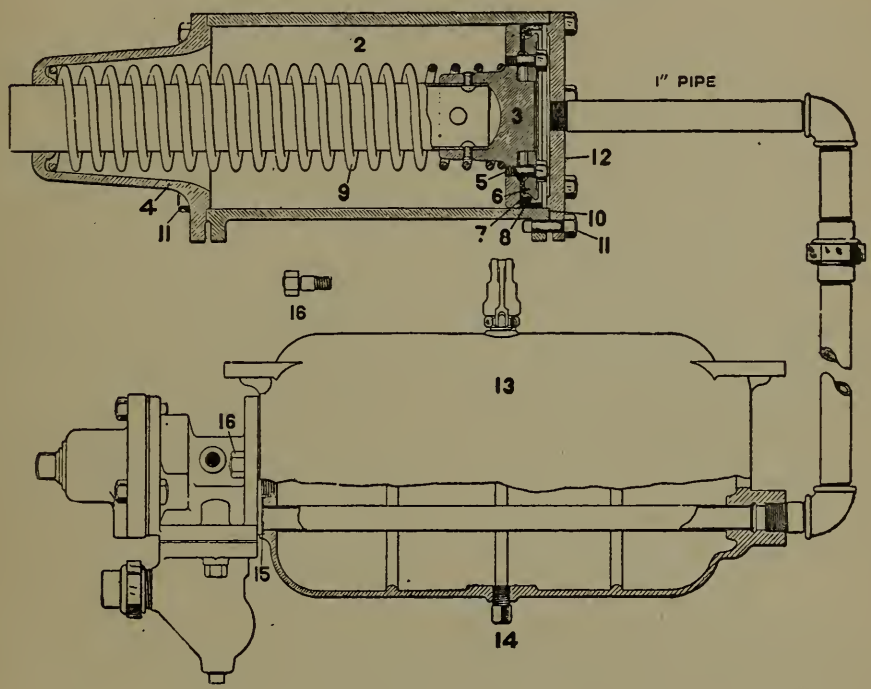

NOTE.—The "F 41," Brake Apparatus illustrated above is furnished with "Schedule H-2" for freight cars, the light weight of which exceeds 15,000 pounds, but the construction of which prevents the application of the combined-cylinder-and-reservoir type of brake illustrated on Plate "F 40." The brake cylinder is 8 inches in diameter by 12 inches stroke.

Standard Freight-Car Brake Cylinder and Auxiliary Reservoir Detached, with "F 36" Triple Valve, complete.

No.		No.	
1.	Brake Cylinder, complete.	9.	Release Spring.
2.	Cylinder Body.	10.	Cylinder Gasket.
3.	Piston and Rod (includes Follower Studs and Nuts)	11.	Cylinder-Head Bolt and Nut.
4.	Non-Pressure Head.	12.	Pressure Head.
5.	Follower Stud and Nut.	13.	Special Auxiliary Reservoir (includes Nos. 14 and 16)
6.	Follower.	14	Drain Plug.
7.	Packing Leather.	15.	Triple-Valve Gasket.
8.	Packing Expander.	16.	Reservoir Stud and Nut.

PLATE F 42.

SHORT-STROKE FREIGHT-CAR BRAKE CYLINDER AND AUXILIARY RESERVOIR COMBINED, WITH "F 36" TRIPLE VALVE.

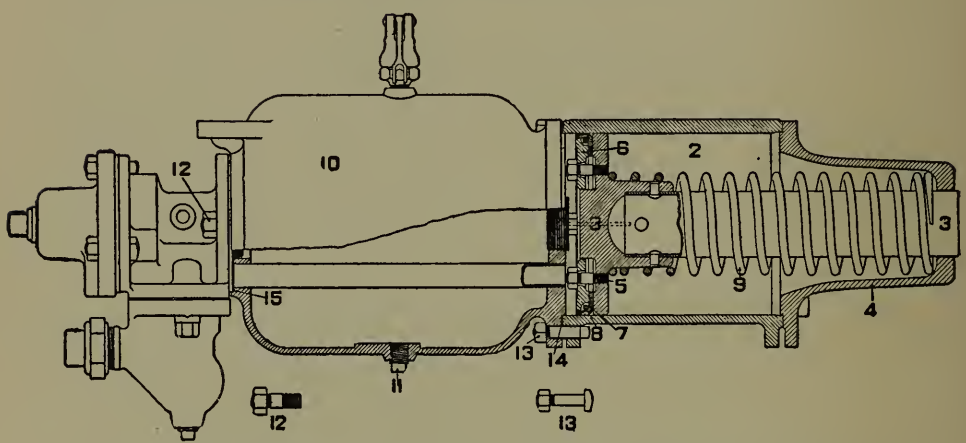

NOTE.—The "F 42" Brake Apparatus illustrated above is furnished with "Schedule H-3" for freight cars of medium weight to which a combined cylinder and reservoir of greater length cannot be successfully applied. The brake cylinder is 8 inches in diameter by 8 inches stroke.

No. 1. Short-Stroke Freight-Car Brake Cylinder and Auxiliary Reservoir Combined, with "F 36" Triple Valve, complete.

No.		No.	
2.	Cylinder Body.	9.	Release Spring.
3.	Piston and Rod (includes Follower Studs and Nuts).	10.	Reservoir (includes Nos. 11 and 12).
4.	Non-Pressure Head.	11.	Drain Plug.
5.	Follower Stud and Nut.	12.	Reservoir Stud and Nut.
6.	Follower.	13.	Cylinder-Head Bolt and Nut.
7.	Packing Leather.	14.	Cylinder Gasket.
8.	Packing Expander.	15.	Triple-Valve Gasket.

PLATE G 43. DETAIL PARTS OF STANDARD FREIGHT-CAR BRAKE APPARATUS.

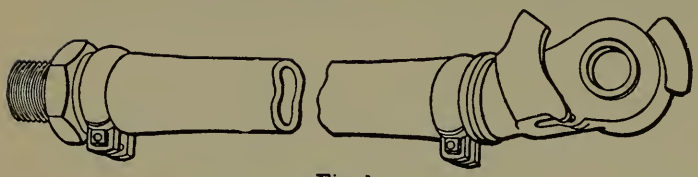

Fig. 1.

Fig 3.

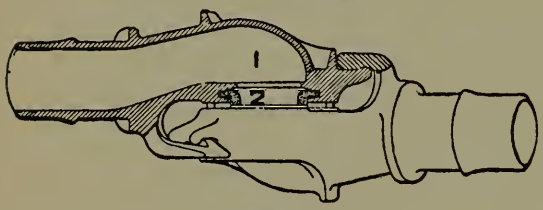

Fig. 2.

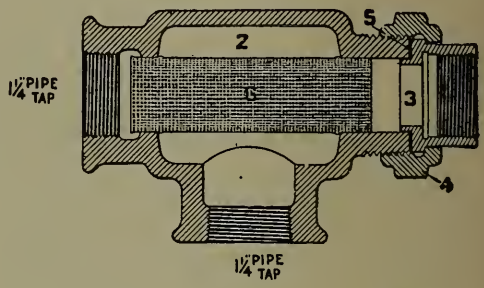

Fig. 4.

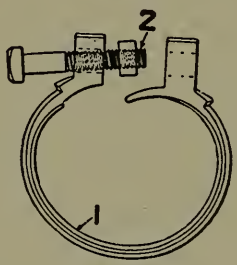

Fig. 5.

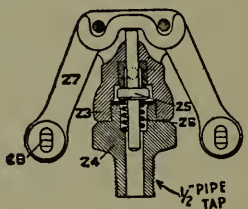

Fig. 8.

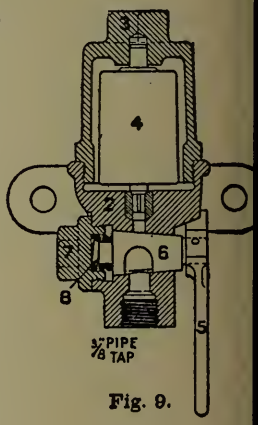

Fig. 9.

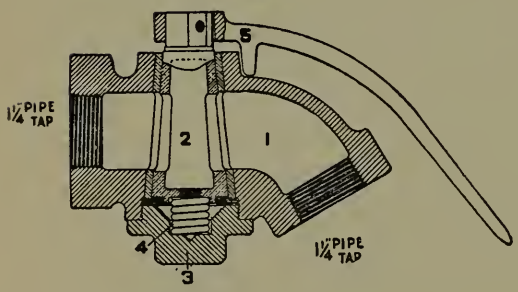

Fig. 6.

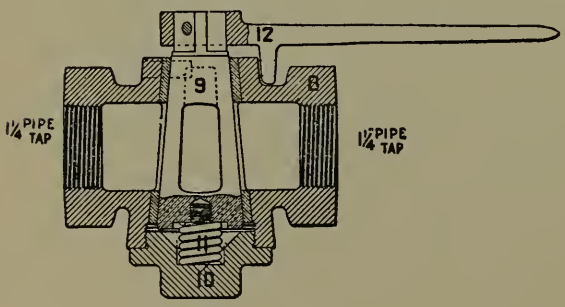

Fig. 7.

Fig. 10.

Fig. 11.

PLATE G 43.

DETAIL PARTS OF STANDARD FREIGHT-CAR BRAKE APPARATUS.

FIG. 1.

Standard One and One-quarter inch Hose and Coupling, complete.

Hose 22 inches long (order in pairs.)

FIG. 2.

Standard One and One-quarter inch Hose Coupling (order in pairs).

No.
1. One and One-quarter inch Hose Coupling Case.
2. One and One-quarter inch Hose-Coupling Packing Ring.

FIG. 3.

One and One-quarter inch Hose Nipple.

FIG. 4.

One and One-quarter inch Brake-Pipe Air Strainer, complete.

No.
2. Strainer Body.
3. Union Swivel.
4. Union Nut.
5. Union Gasket.
6. Strainer.

FIG. 5.

One and One-quarter inch Hose Clamp, complete.

No.
1. One and One-quarter inch Hose Clamp.
2. One and One-quarter inch Hose-Clamp Bolt.

FIG. 6.

One and One-quarter inch Angle Cock, complete.

No.
1. Angle-Cock Body.
2. Angle-Cock Key.
3. Angle-Cock Cap.
4. Angle-Cock Spring.
5. Angle-Cock Handle.

FIG. 7.

One and One-quarter inch Cut-out Cock, complete.

No.
8. Cock Body.
9. Cock Key.
10. Cock Cap.
11. Key Spring.
12. Cock Handle.

FIG. 8.

Release Valve, complete.

No.
23. Release-Valve Cylinder.
24. Release-Valve Stud.
25. Vent Valve.
26. Release-Valve Spring.
27. Release-Valve Handle.
28. Release-Valve Pin.

FIG. 9.

Improved Pressure-Retaining Valve, complete.

No.
2. Retaining-Valve Body (includes Nos. 5, 6, 7, and 8).
3. Retaining-Valve Case.
4. Retaining-Valve Weight.
5. Retaining-Valve Handle.
6. Retaining-Valve-Cock Key.
7. Retaining-Valve-Cock Cap.
8. Retaining-Valve-Cock Spring.

FIG. 10.

Coupling-Groove Cleaning Tool.

FIG. 11.

One and One-quarter inch Dummy Coupling.

PLATE F 45.

HIGH-SPEED BRAKE AUTOMATIC REDUCING VALVE

1898 PATTERN.

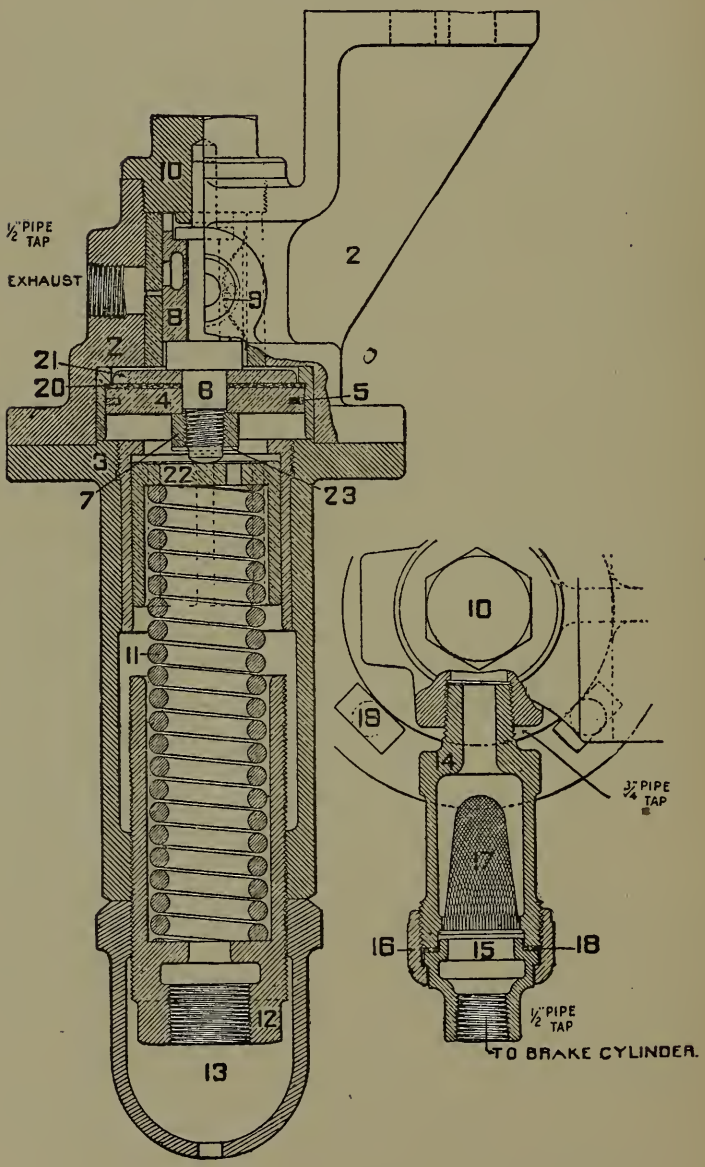

PLATE F 45.

HIGH-SPEED BRAKE AUTOMATIC REDUCING VALVE.

No. 1. High-Speed Brake Automatic Reducing Valve, complete.

No.		No.	
2.	Valve Body.	13.	Check Nut.
3.	Spring Box.	14.	Union Stud.
4.	Valve Piston (includes No. 5).	15.	Union Swivel.
5.	Packing Ring.	16.	Union Nut.
6.	Piston Stem.	17.	Union Strainer.
7.	Piston-Stem Nut	18.	Union Gasket.
8.	Slide Valve.	19.	Bolt and Nut.
9.	Slide-Valve Spring.	20.	Leather Washer.
10.	Cap Nut.	21.	Piston Disc.
11.	Regulating Spring.	22.	Spring Abutment.
12.	Regulating Nut.	23	Cotter Pin.

PLATE F 46.

HIGH-SPEED PLAIN TRIPLE VALVE.

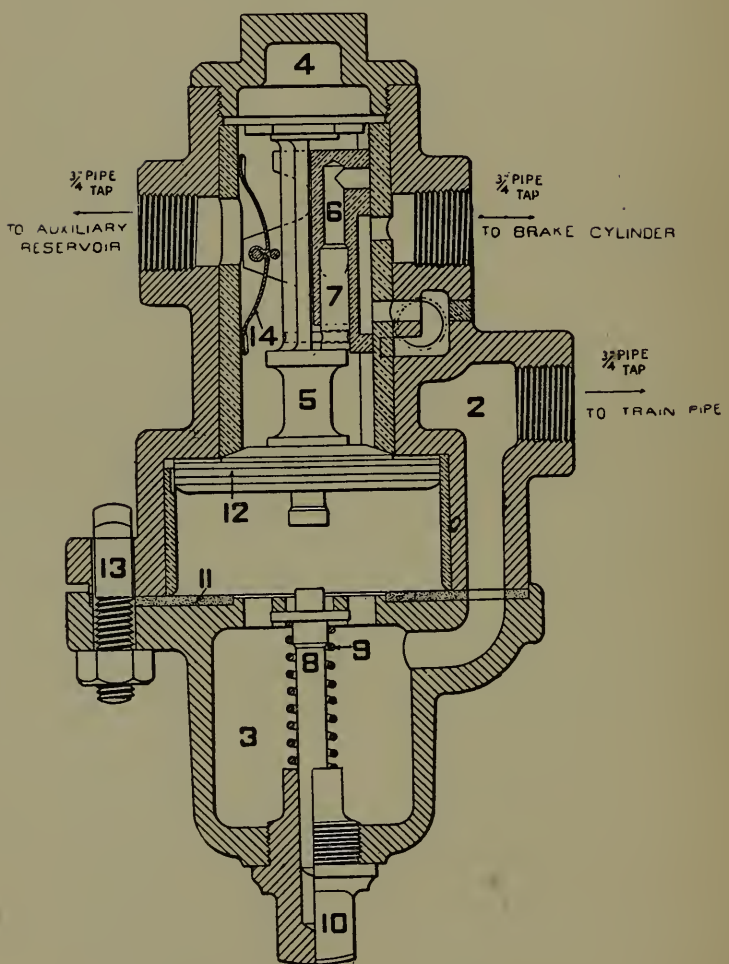

NOTE.—This Triple Valve is designed specially for use in combination with other High-Speed Brake Appliances, for operating both Driver and Engine-Truck Brakes, and must not be used for other purposes.

PLATE F46.

HIGH-SPEED PLAIN TRIPLE VALVE.

No. 1. High-Speed Plain Triple Valve, complete.

No.		No.	
2.	Triple-Valve Body (bushed)	9.	Graduating Spring.
3.	Cylinder Cap.	10.	Graduating-Stem Nut.
4.	Cap Nut.	11.	Cylinder Cap Gasket.
5.	Piston (includes No. 12).	12.	Packing Ring.
6.	Slide Valve.	13.	Bolt and Nut.
7.	Graduating Valve.	14.	Slide-Valve Spring.
8.	Graduating Stem.		

*GRADUATING SPRING SPECIFICATIONS: Phospor-Bronze Spring Wire, No. 14 B. W. G., $\frac{11}{16}$ inches in diameter, 12 coils, 2 1/2 inches free height; $\frac{3}{4}$ inches inside diameter.

PLATE F 47. DUPLEX PUMP GOVERNOR.

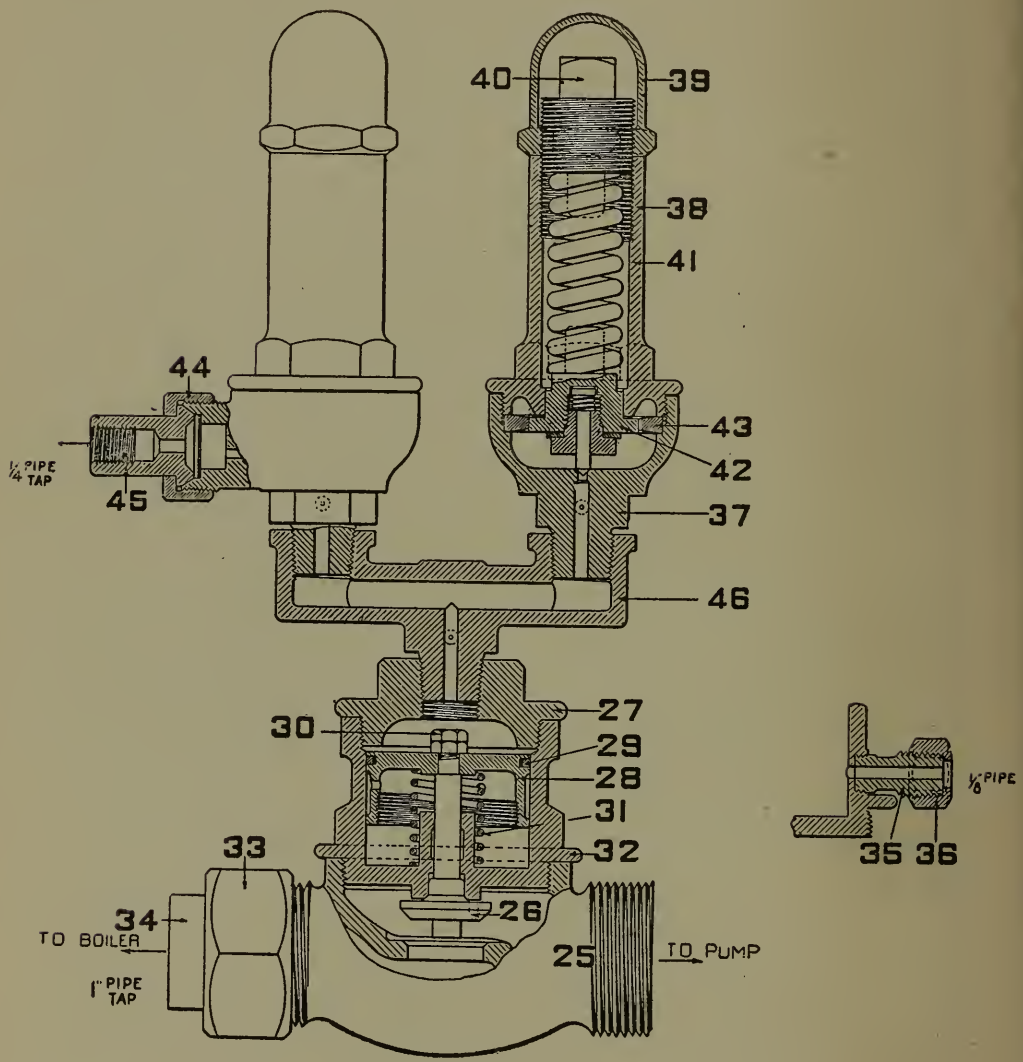

The diaphragm portion of this Governor at the right is adjusted to govern the 110-lb. pressure, and the one at the left the 90-lb. pressure for ordinary braking. A 1/4-inch Cut-out Cock must be used in the pipe attached to fitting 45 (see Plate "G 50") of the low-pressure diaphragm, and must be closed when operating the High-Speed Brake.

PLATE F47.

DUPLEX PUMP GOVERNOR.

No. 1. Duplex Pump Governor, complete.

No.	
25.	Steam-Valve Body.
26.	Steam Valve.
27.	Cylinder Cap.
28.	Governor Piston (includes No. 29).
29.	Piston Packing Ring.
30.	Governor-Piston Nut.
31.	Governor-Piston Spring.
32.	Steam-Valve Cylinder (includes Nos. 35 and 36).
33.	One-inch Union Nut.
34.	One-inch Union Swivel.
35.	Waste-Pipe Stud.
36.	Waste-Pipe Union Nut.
37.	Diaphragm Body.
38.	Spring Box.
39.	Cap Nut.
40.	Regulating Nut.
41.	Regulating Spring.
42.	Diaphragm, complete.
43.	Diaphragm Ring.
44.	Union Nut.
45.	Union Swivel.
46.	Siamese Fitting.

PLATE F48.

DETAIL PARTS OF HIGH-SPEED BRAKE AND HIGH-PRESSURE CONTROL APPARATUS.

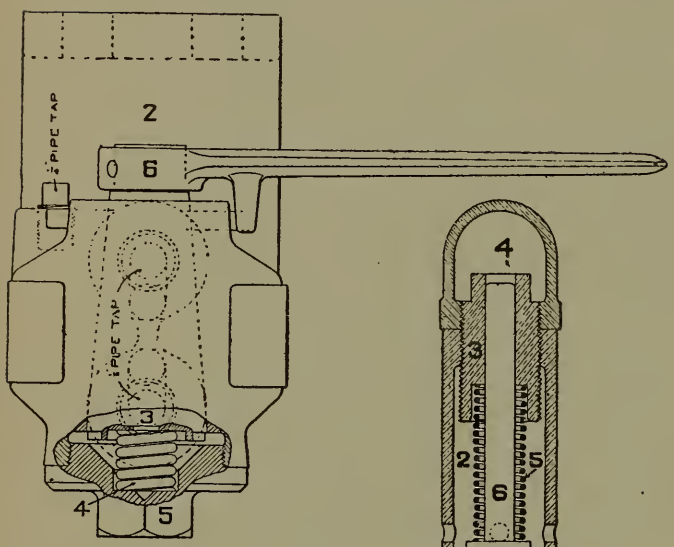

FIG. 1

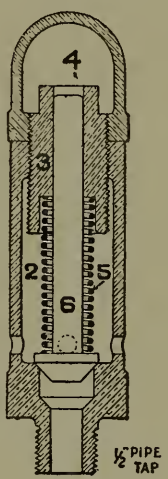

Fig. 2.

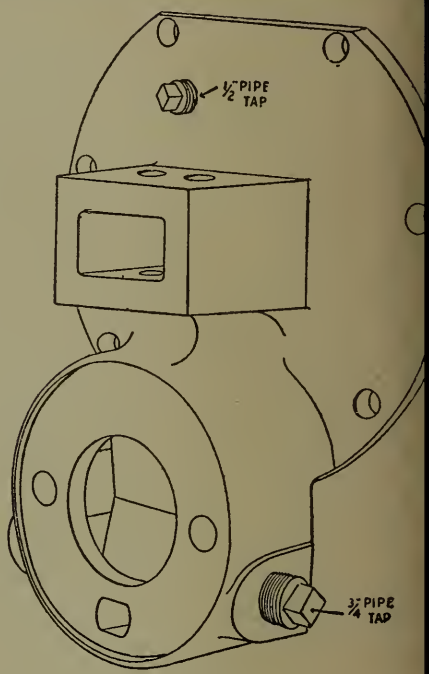

Fig. 4

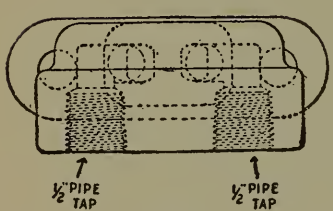

Fig. 3.

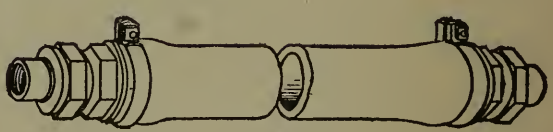

Fig. 6.

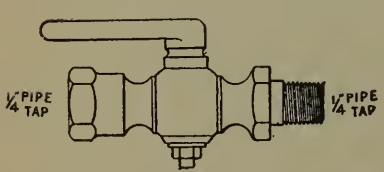

FIG. 5

L. of C.

PLATE F 48.

DETAIL PARTS OF HIGH-SPEED BRAKE AND HIGH PRESSURE CONTROL APPARATUS.

FIG. 1.

Feed-Valve Bracket with Reversing Cock, complete.

No.
2. Reversing-Cock Body.
3. Reversing-Cock Key.
4. Reversing-Cock Spring.
5. Reversing-Cock Cap.
6. Reversing-Cock Handle.

FIG. 2.

Safety Valve, complete.

No.
2. Safety-Valve Body.
3. Regulating Nut.
4. Cap Nut.
5. Regulating Spring.
6. Valve.

FIG. 3.

Feed-Valve Pipe Bracket.

FIG. 4.

Tender-Cylinder Head for Quick-Action Triple Valve with Slack-Adjuster Lug.

FIG. 5.

One-fourth inch Cock.

FIG. 6.

Flexible Hose Connection with Fittings for Half-inch Pipe.

PLATE G 49.

Diagramatic Illustration of Westinghouse High Pressure Control Apparatus.—*Opposite.*

USE HIGH PRESS

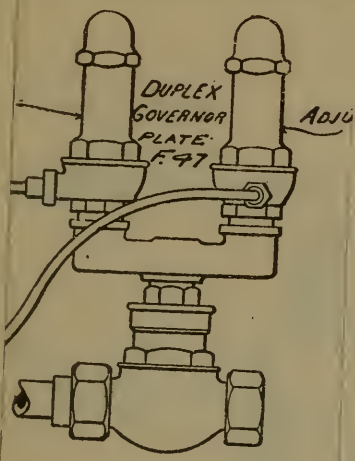



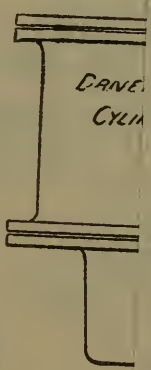

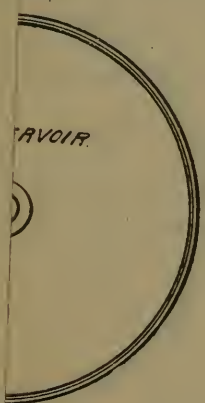

EXPLANATION.

STALLATION OF THE APPARATUS
DARD BRAKE EQUIPMENT OF A
SCHEDULE U," AND THE DEVICE

PLATE G 49. DIAGRAMATIC ILLUSTRATION OF WESTINGHOUSE HIGH PRESSURE CONTROL APPARATUS.

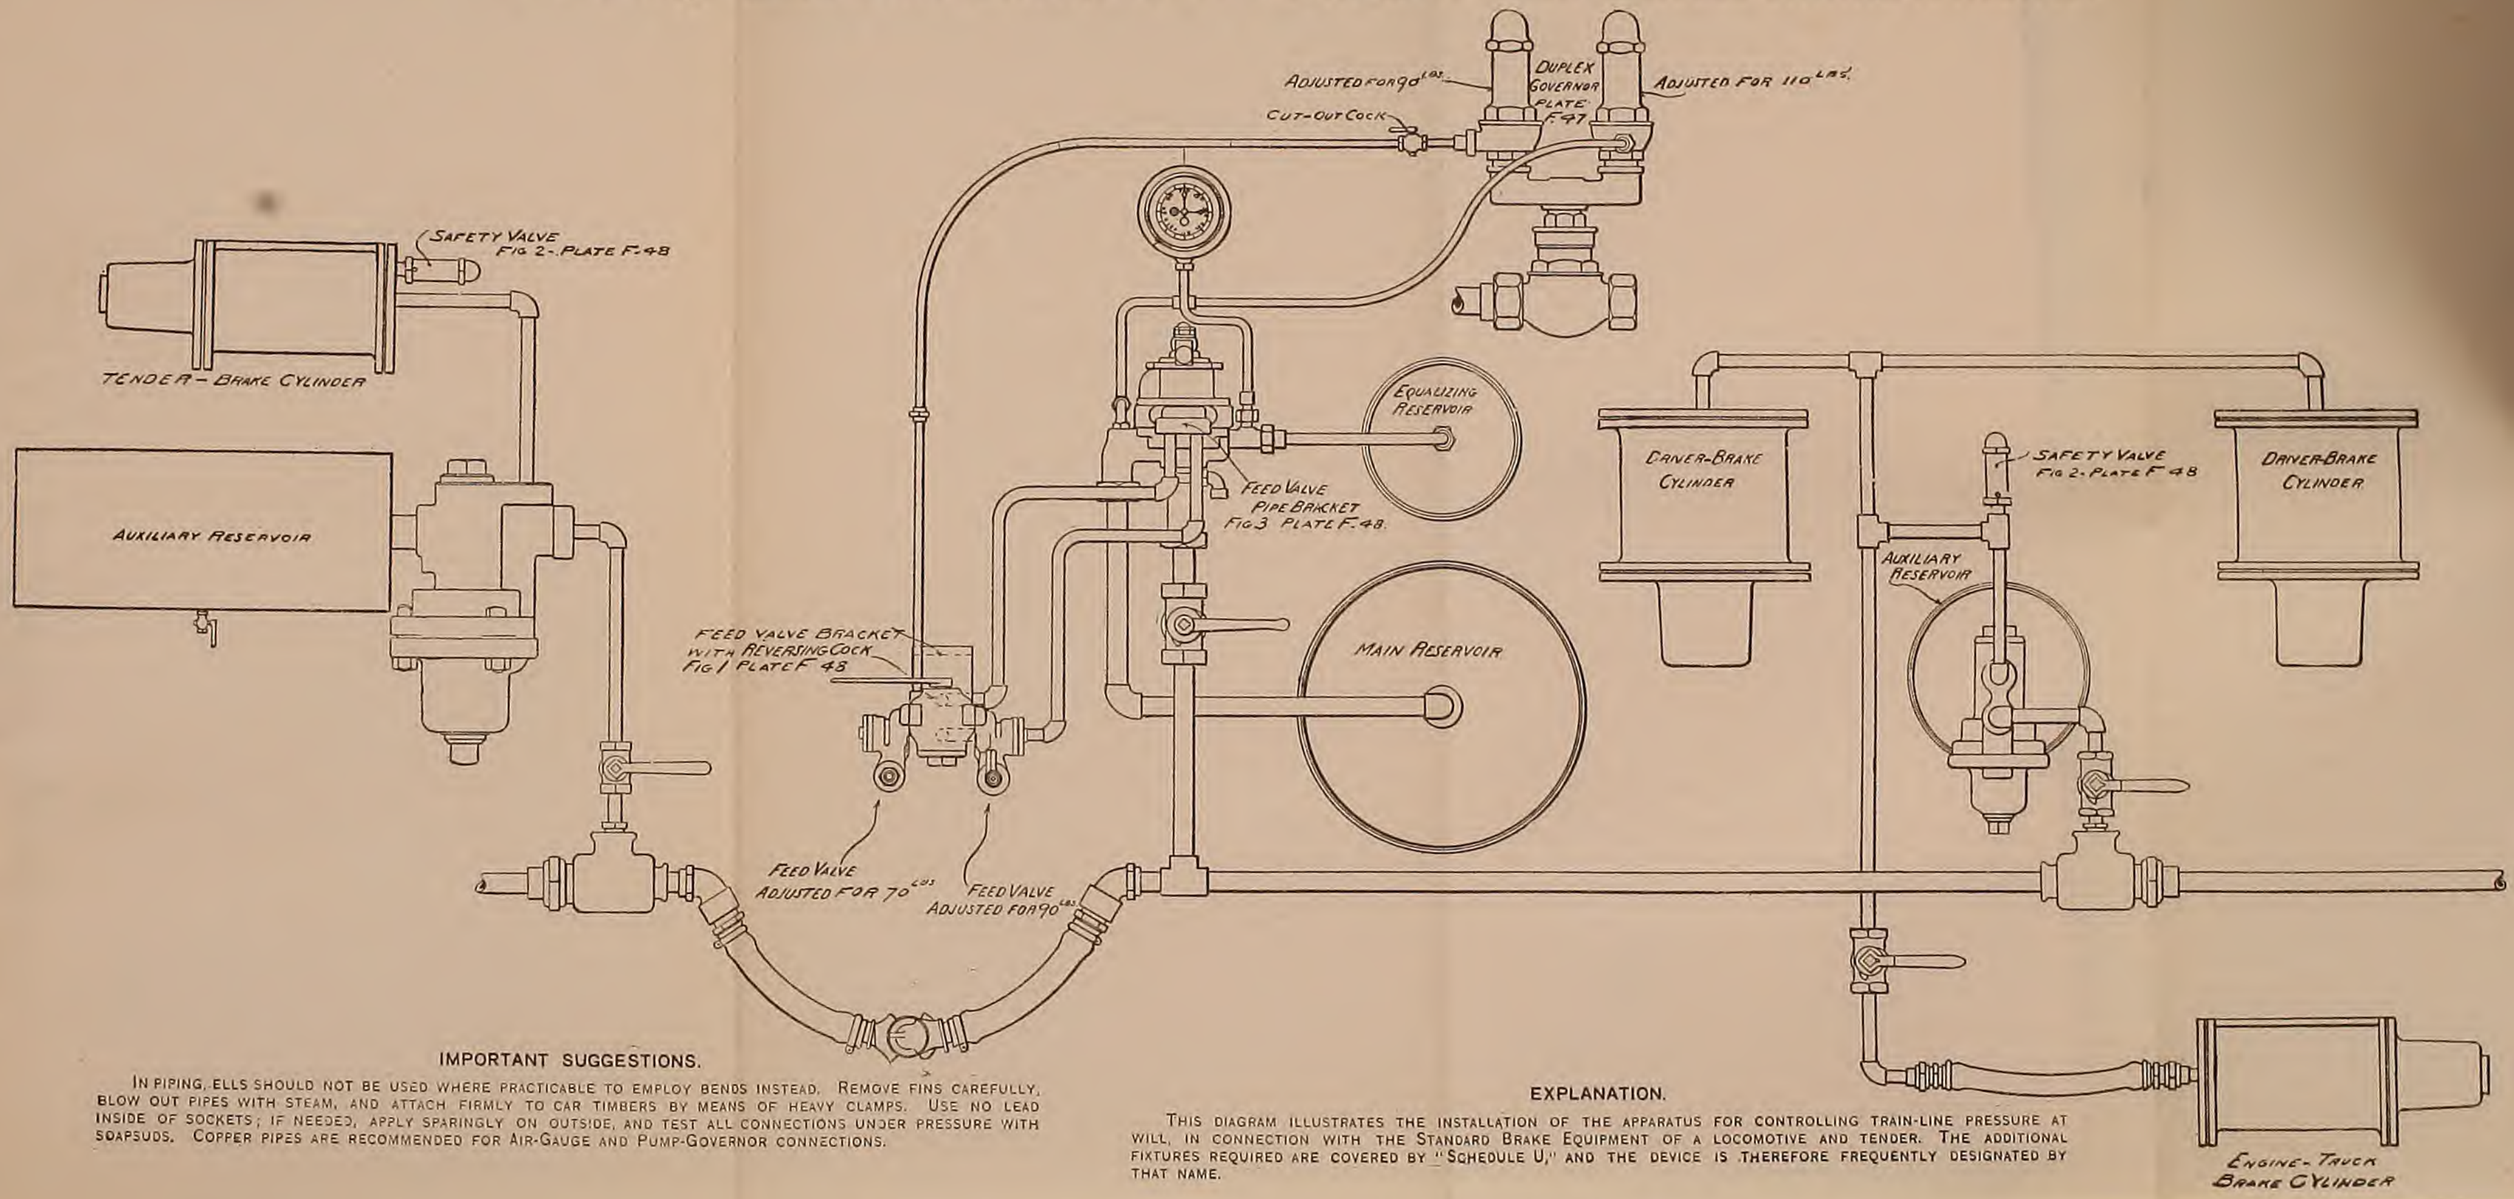

IMPORTANT SUGGESTIONS.

IN PIPING, ELLS SHOULD NOT BE USED WHERE PRACTICABLE TO EMPLOY BENDS INSTEAD. REMOVE FINS CAREFULLY, BLOW OUT PIPES WITH STEAM, AND ATTACH FIRMLY TO CAR TIMBERS BY MEANS OF HEAVY CLAMPS. USE NO LEAD INSIDE OF SOCKETS; IF NEEDED, APPLY SPARINGLY ON OUTSIDE, AND TEST ALL CONNECTIONS UNDER PRESSURE WITH SOAPSUDS. COPPER PIPES ARE RECOMMENDED FOR AIR-GAUGE AND PUMP-GOVERNOR CONNECTIONS.

EXPLANATION.

THIS DIAGRAM ILLUSTRATES THE INSTALLATION OF THE APPARATUS FOR CONTROLLING TRAIN-LINE PRESSURE AT WILL, IN CONNECTION WITH THE STANDARD BRAKE EQUIPMENT OF A LOCOMOTIVE AND TENDER. THE ADDITIONAL FIXTURES REQUIRED ARE COVERED BY "SCHEDULE U," AND THE DEVICE IS THEREFORE FREQUENTLY DESIGNATED BY THAT NAME.

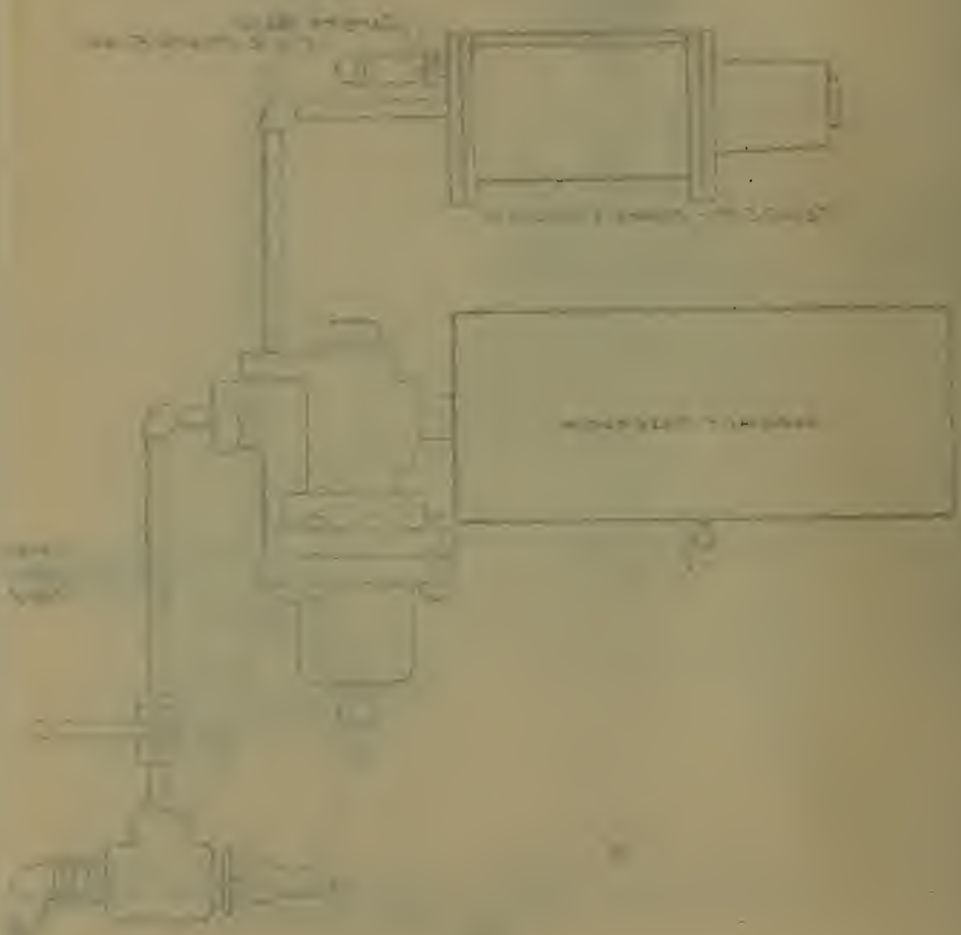

PLATE G 50.

Diagramatic Illustration of the Westinghouse Standard High Speed Brake.—*Opposite.*

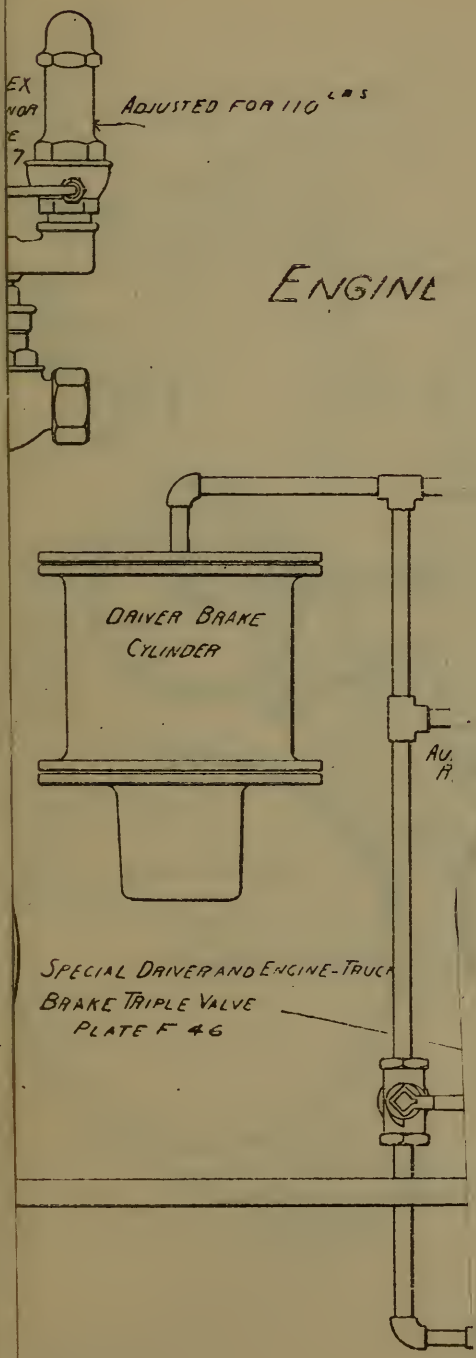
EX
NOR
E
7
ADJUSTED FOR 110 LBS
ENGINE
DRIVER BRAKE
CYLINDER
AU.
R.
SPECIAL DRIVER AND ENGINE-TRUCK
BRAKE TRIPLE VALVE
PLATE F 46

PLATE G 50. DIAGRAMATIC ILLUSTRATION OF THE WESTINGHOUSE STANDARD HIGH SPEED BRAKE.

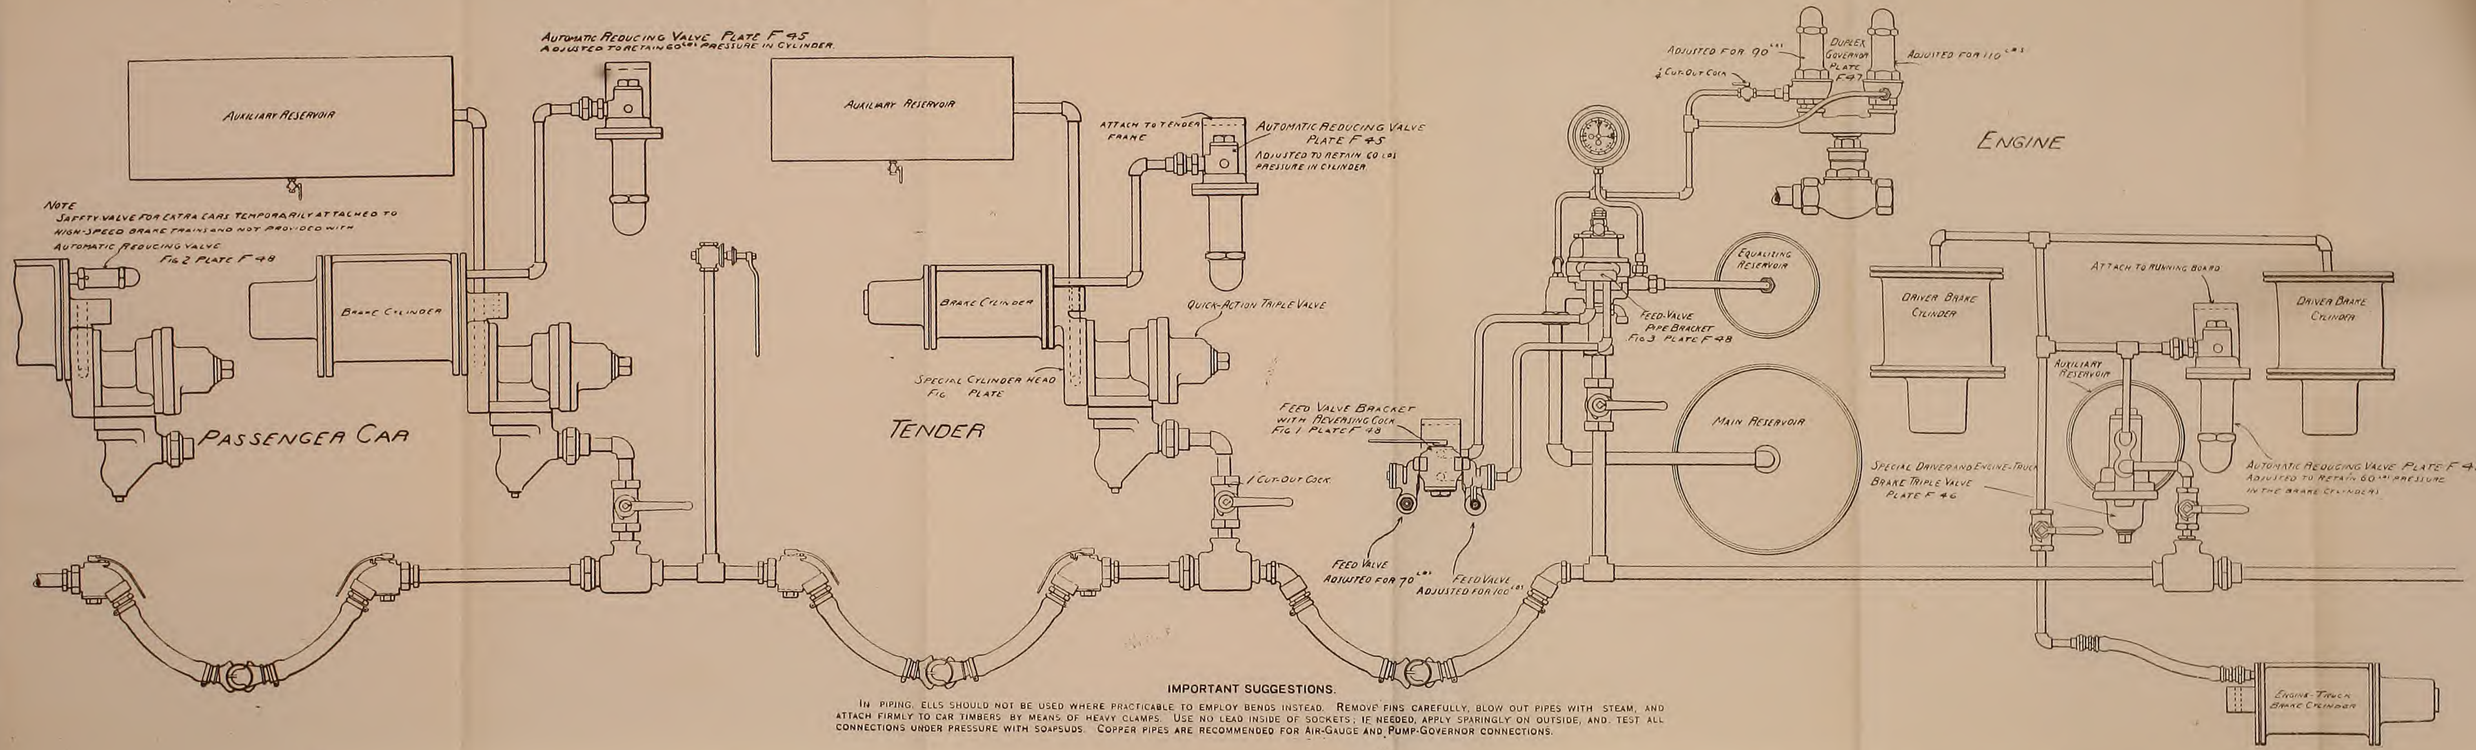

IMPORTANT SUGGESTIONS.

IN PIPING, ELLS SHOULD NOT BE USED WHERE PRACTICABLE TO EMPLOY BENDS INSTEAD. REMOVE FINS CAREFULLY, BLOW OUT PIPES WITH STEAM, AND ATTACH FIRMLY TO CAR TIMBERS BY MEANS OF HEAVY CLAMPS. USE NO LEAD INSIDE OF SOCKETS; IF NEEDED, APPLY SPARINGLY ON OUTSIDE, AND TEST ALL CONNECTIONS UNDER PRESSURE WITH SOAPSUDS. COPPER PIPES ARE RECOMMENDED FOR AIR-GAUGE AND PUMP-GOVERNOR CONNECTIONS.

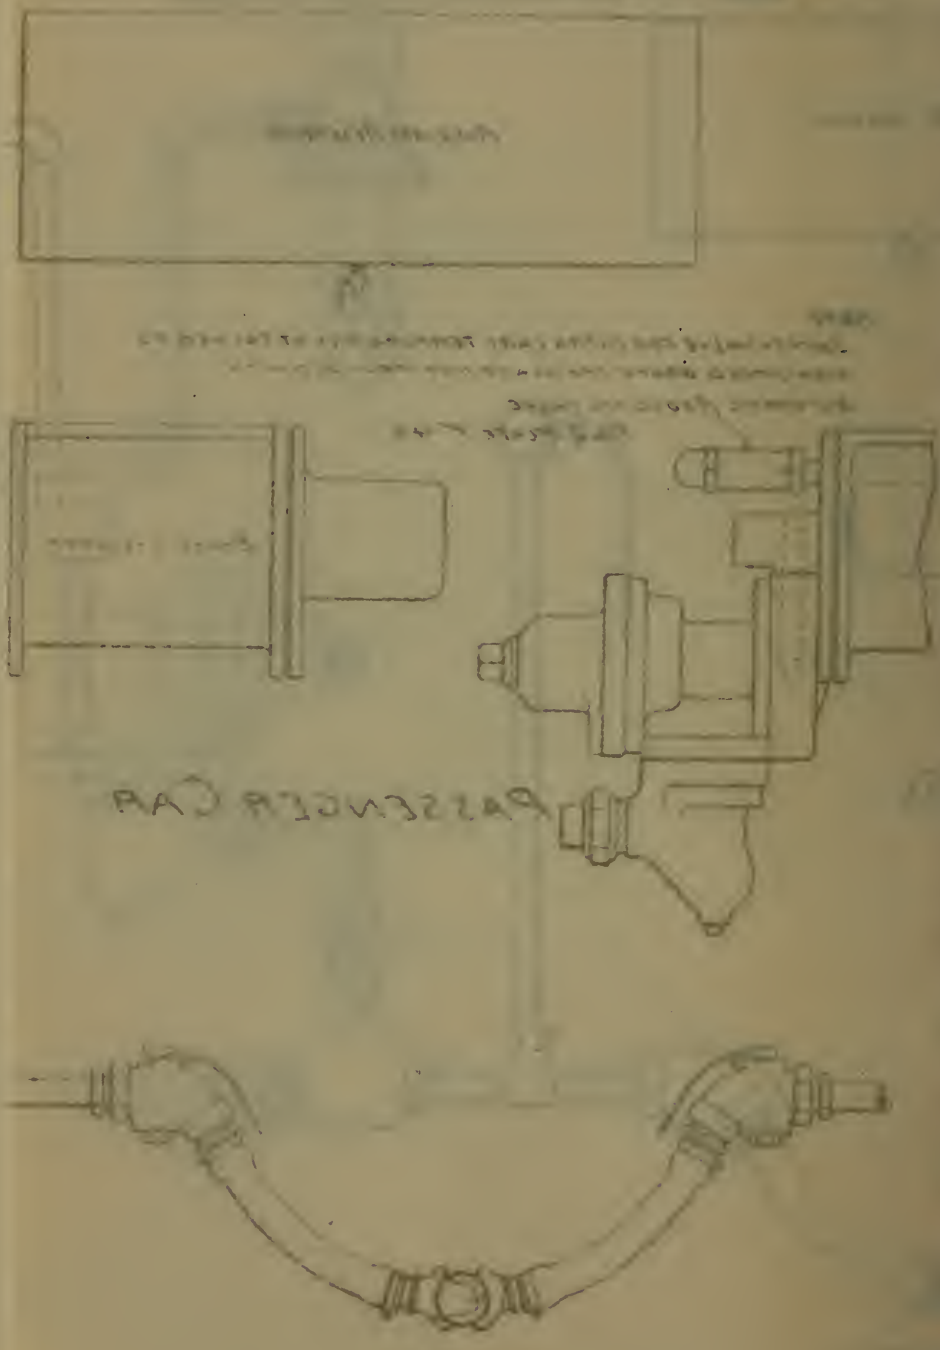

FEB 7 1901

Deacidified using the Bookkeeper process.
Neutralizing agent: Magnesium Oxide
Treatment Date: April 2004

PreservationTechnologies
A WORLD LEADER IN PAPER PRESERVATION
111 Thomson Park Drive
Cranberry Township, PA 16066
(724) 779-2111

LIBRARY OF CONGRESS
0 012 157 997 2